


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

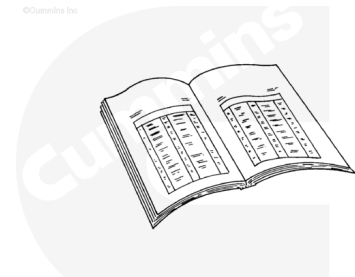

ck800wa

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [122°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ CAUTION ⚠


Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

- Disconnect the batteries. Refer to Procedure 013-009 (</qs3/pubsys2/xml/en/procedures/99/99-013-009.html>).
- Drain the engine coolant. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Remove the coolant vent lines. Refer to Procedure 008-017 (</qs3/pubsys2/xml/en/procedures/20/20-008-017.html>).


- Remove the aftercooler coolant tube. Refer to Procedure 010-006 (/qs3/pubsys2/xml/en/procedures/20/20-010-006.html).

Remove

Remove the coolant make-up hose from the expansion tank and the coolant bypass tube.

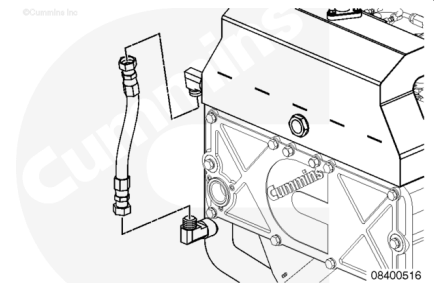


Attach two approved lifting straps and an approved lifting device to lift the expansion tank.

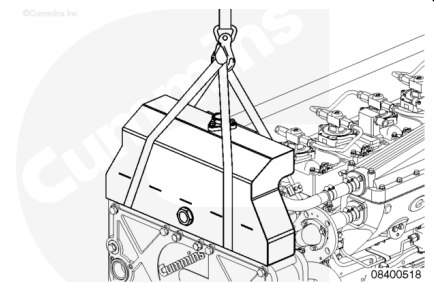

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

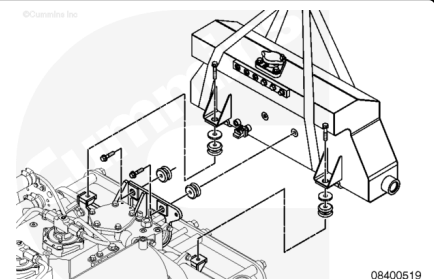

The expansion tank is mounted onto a support bracket which is mounted onto the engine. The support bracket has two capscrews that attach to the back of the expansion tank and two capscrews on the outboard sides of the bracket.


Remove the four capscrews from the expansion tank support bracket.

Remove the expansion tank from the support bracket.

Remove the rubber vibration isolators.

Clean and Inspect for Reuse


Clean the expansion tank by flushing it with warm water.

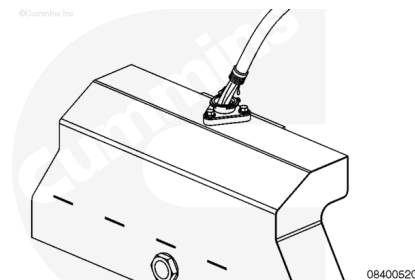

Inspect the mounting areas for cracks.


Inspect all connection points for cracks or signs of leakage.

Inspect the fill neck and pressure cap for leakage or cracks.

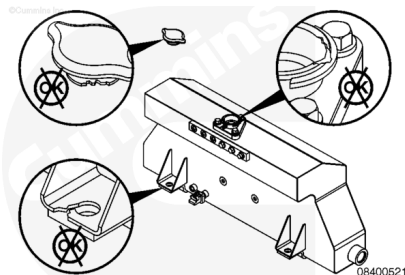

Inspect the rubber vibration isolators for cracks in the rubber.


If the rubber vibration isolators are cracked they **must** be replaced.

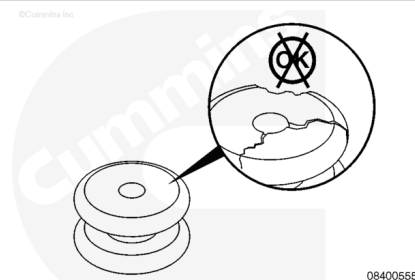

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

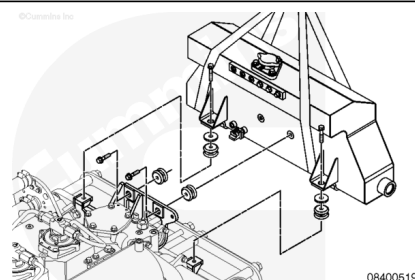

Install the expansion tank onto the bracket.

Install the four mounting capscrews and rubber vibrations isolators.


Tighten the capscrews.

Torque Value: 40 n•m [30 ft-lb]

Remove the lifting sling.

Install the coolant make-up hose to the expansion tank and the coolant bypass tube.

Torque Value: 74 n•m [55 ft-lb]

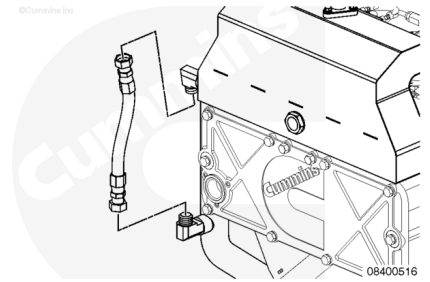

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when filling the cooling system so that the coolant is not spilled into the bilge area. Do not pump coolant overboard. If the coolant is spilled, it must be disposed of in accordance with local environmental regulations

- Install the aftercooler coolant tube. Refer to Procedure 010-006 (</qs3/pubsys2/xml/en/procedures/20/20-010-006.html>).
- Install the coolant vent lines. Refer to Procedure 008-017 (</qs3/pubsys2/xml/en/procedures/20/20-008-017.html>).

- Fill the engine with coolant. Refer to Procedure 008-018 (/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html).
- Connect the batteries. Refer to Procedure 013-009 (/qs3/pubsys2/xml/en/procedures/99/99-013-009.html).
- Operate the engine and check for leaks.

Last Modified: 03-Aug-2006
