


Trainings ▾

Install

Jabsco®

Note : Make sure the o-ring slinger is installed on the shaft before installing the bearing housing.

Install the sea water pump bearing housing to impeller housing with four bolts and lock washers, use a 13-mm wrench.

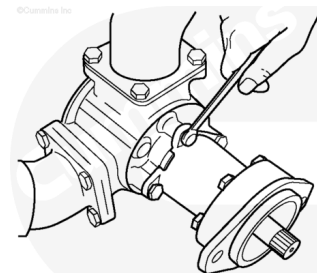


⚠ CAUTION ⚠


Do not touch the carbon face of the mechanical seal, or leaks and damage can occur.

Install the new mechanical seal onto the sea water pump shaft. Seat the seal into the housing recess.


Note : Never reuse a mechanical seal. Always install a new seal, spring, and plate.

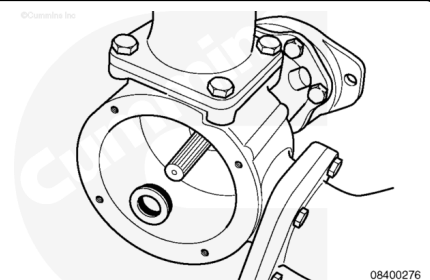


Install the spring and plate.

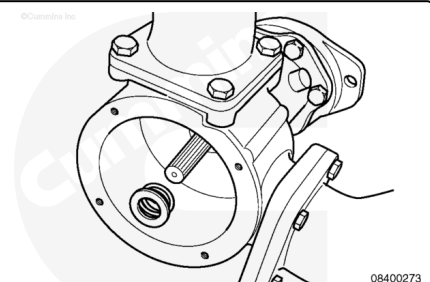


Install the seal-retaining ring onto the shaft.

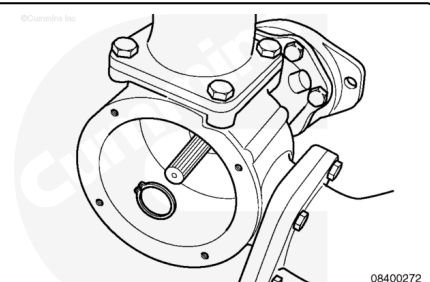


Install the inner wear plate and align the dowel pin in the housing.

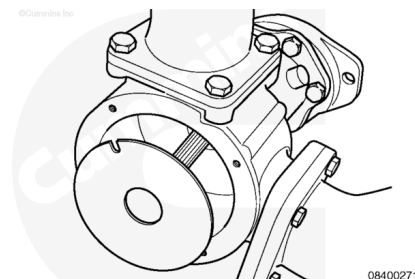


Install the cam liner into the sea water pump impeller housing, aligning the hole in the liner with the dowel in the housing.

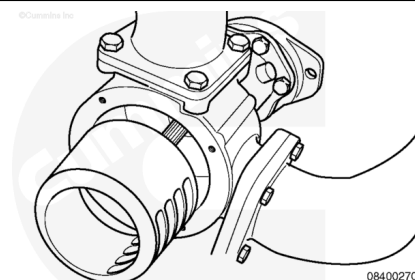


Roll the impeller into an oil filter wrench with the fins facing the opposite direction of the sea water pump rotation.

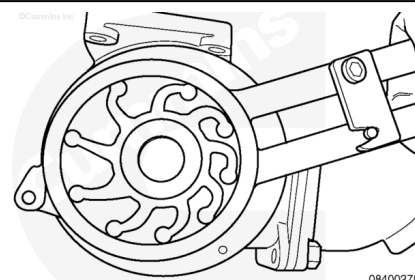


Install the impeller onto the cam liner and onto the splined shaft.

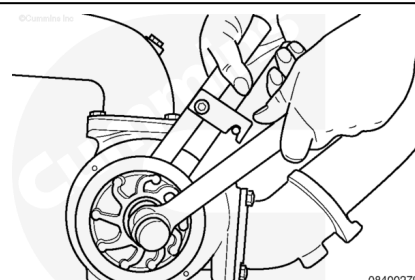

Coat the o-ring with engine oil. Install the cover plate o-ring into the groove in the housing.

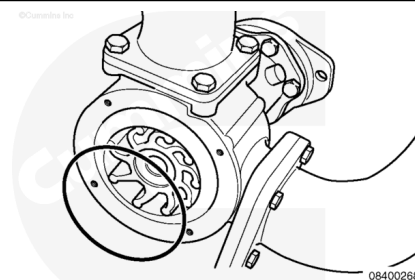


Install the sea water pump front cover with four bolts and lock washers use a 10-mm wrench.

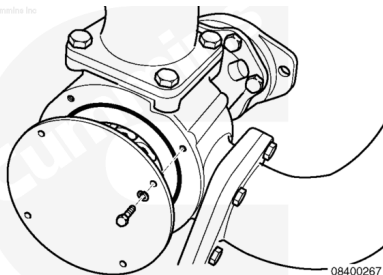


Gilkes

Install the sea water pump, new o-ring, and mounting capscrews.

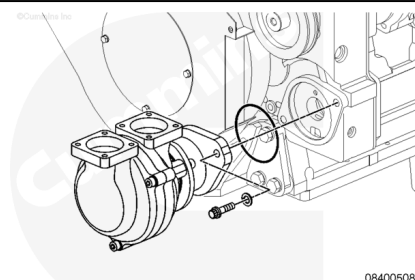


Mounting Capscrews	80 n.m	[60 ft-lb]
-----------------------	--------	------------

Install the lower transfer tube, new gasket, and four capscrews.

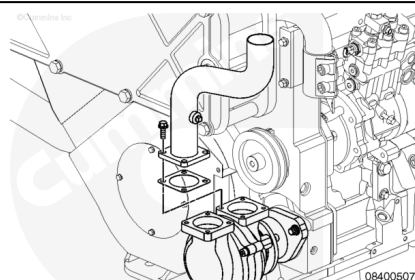


Lower Transfer Tubes Capscrews	45 n.m	[33 ft-lb]
-----------------------------------	--------	------------

Slide the flexible coupling down onto the lower portion of the transfer tube covering the gap between the upper and lower transfer tubes. Tighten the two coupling capscrews.

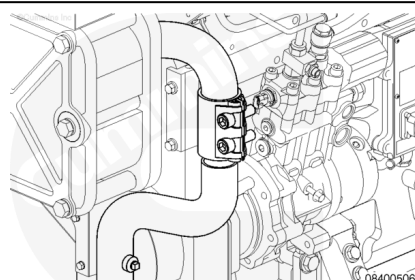


Coupling Capscrews	45 n.m	[33 ft-lb]
-----------------------	--------	------------

Install the pipe clamp supporting the water transfer tube.

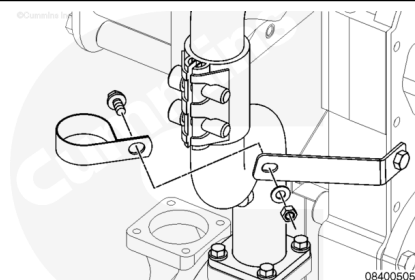


Pipe Clamp Supporting	40 n.m	[30 ft-lb]
--------------------------	--------	------------

Install the inlet connection and elbow, gasket, and the four capscrews to the sea water pump.

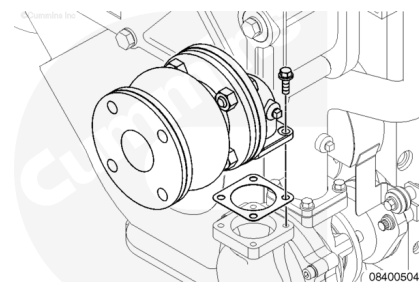

Inlet Connection Capscrews	45 n.m	[33 ft-lb]
-------------------------------	--------	------------

Install the sea water piping, new gasket, and the four capscrews and nuts to the inlet connection.

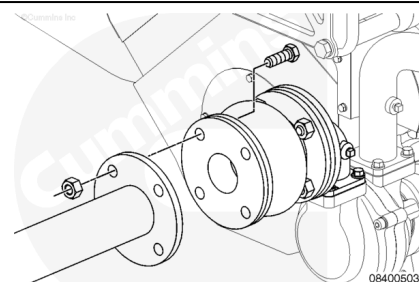

Sea Water Piping Capscrews	80 n.m	[60 ft-lb]
-------------------------------	--------	------------