


Trainings ▾


Remove

Jabsco®

Remove the four capscrews with lock washers, as well as the cover, from the sea water pump. Use a 10-mm socket.

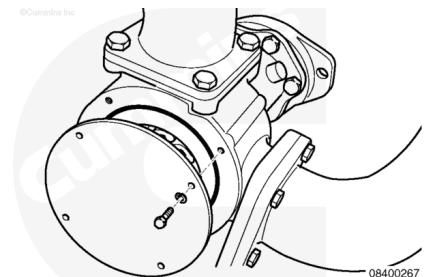


Remove the cover plate o-ring from the sea water pump housing.

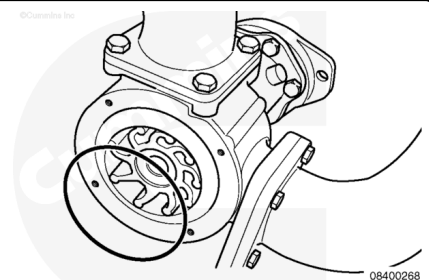

⚠ CAUTION ⚠


Do not pry against the cam liner to remove the impeller as this can cause damage to the liner. Be sure to note the direction of impeller fins for proper reinstallation.

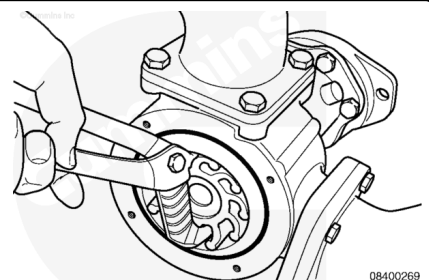


Grasp the hub of the impeller with pliers and remove it from the impeller bore.

Note : Care should be taken **not** to drop or damage the cam liner.


Remove the cam liner from the pump body.

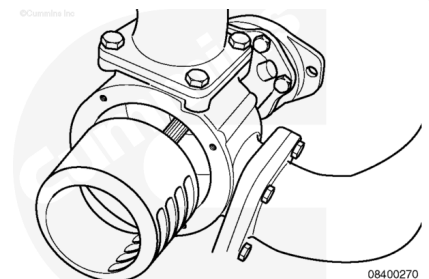


Remove the inner wear plate.

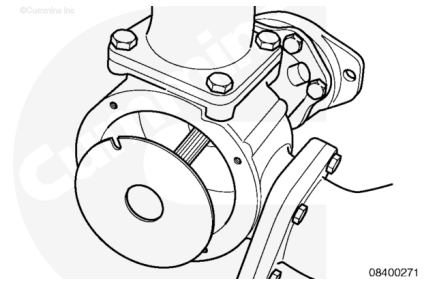


Remove the mechanical seal-retaining snap ring from the shaft.

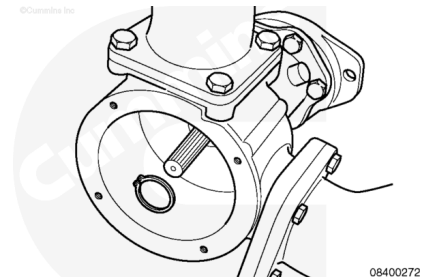

Remove the spring and plate, and discard the parts.

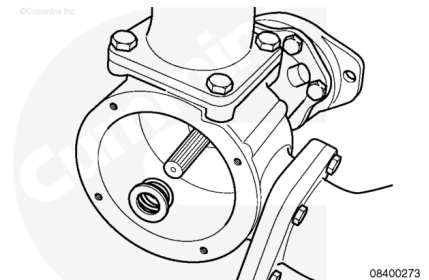


Remove the four bolts with washers mounting the bearing housing to the impeller housing use a 13-mm wrench.

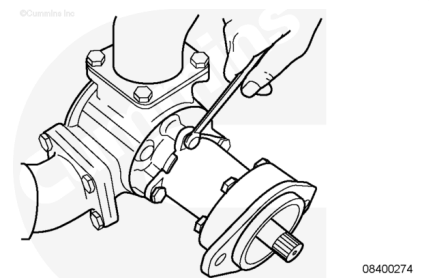


Note : An o-ring will remain on the bearing housing side of the shaft when the two housings are separated. This o-ring should be inspected before reuse.

Separate the impeller housing from the bearing housing. This is performed to remove the mechanical seal from the impeller shaft inside the impeller housing.

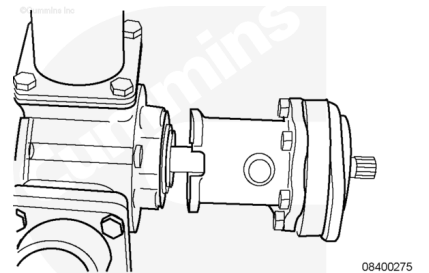

Once the bearing housing has been pulled back, as in the previous step, the carbon sealing ring can easily be removed from its recessed area in the impeller housing.


Note : Remove and discard the carbon sealing ring.

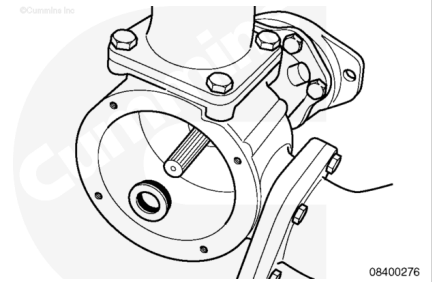

Gilkes


Remove the four capscrews and nuts from the inlet connection and separate the sea water piping to the inlet connection.

Discard the gasket.

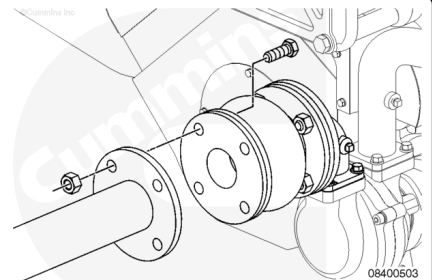


Remove the four capscrews from the inlet elbow that connects to the sea water pump and remove the inlet connection and elbow.


Discard the gasket.

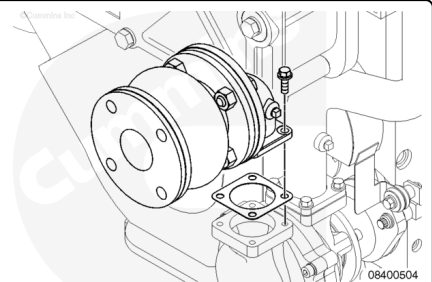

Remove the pipe clamp supporting the water transfer tube.

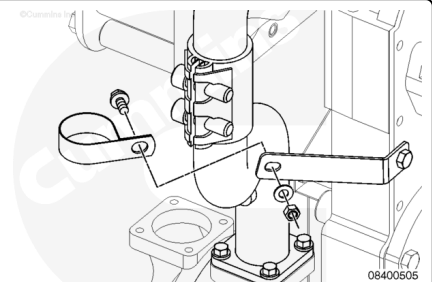


Loosen the two capscrews securing the flexible coupling and slide it up onto the upper portion of the transfer tube.

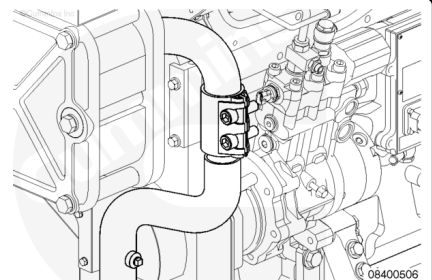

Remove the four capscrews, lower transfer tube, and gasket.

Discard the gasket.

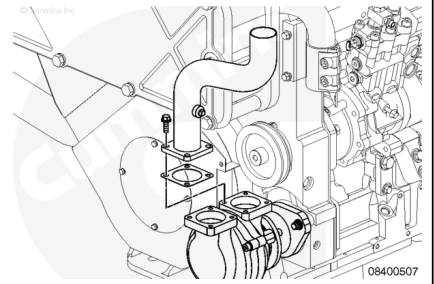

Remove the two mounting capscrews, sea water pump and o-ring.

Discard the o-ring.

