

Trainings ▾

Install


Install the inlet connection (1), gasket, and capscrews.

Tighten the capscrews.

Torque Value: 40 n•m [30 ft-lb]

Do **not** tighten the support bracket until the water pump is assembled to the engine. Use a heavy, plain washer on the capscrew that attaches through the slotted hole.


Install the support bracket (2).

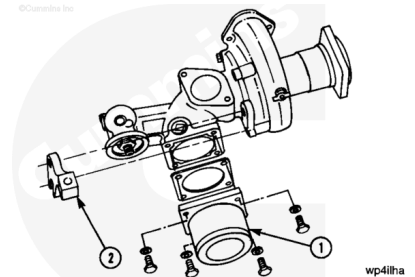

Failure of the water pump drive shaft will result if the wrong shaft is installed.

Use shaft (1) with cast iron impeller pumps (marine applications). Use shaft (2) with phenolic (plastic) impeller pumps.

Install the shaft with the oil hole at the side of the shaft toward the water pump.

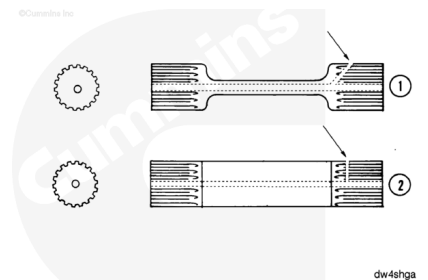

Use clean engine oil to lubricate the drive shaft (14).


Install the shaft in the splined hole in the water pump drive.

Do **not** tighten the capscrews and nut until the support bracket is aligned with the cylinder block.

Install the gasket and water pump. Install three capscrews and nuts.

Tighten the capscrews and nuts.

Torque Value: 45 n•m [33 ft-lb]

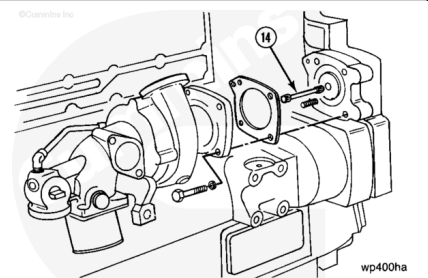

The support bracket **must** be flat against the water pump and the cylinder block. Align the bracket before tightening the capscrews.

Install the capscrew through the bracket.


Tighten the capscrew.

Torque Value: 206 n•m [152 ft-lb]

Check the alignment between the support bracket and the water pump. Loosen the capscrew and adjust, if necessary.

Tighten the capscrews holding the support bracket to the water pump.

Torque Value: 45 n•m [33 ft-lb]

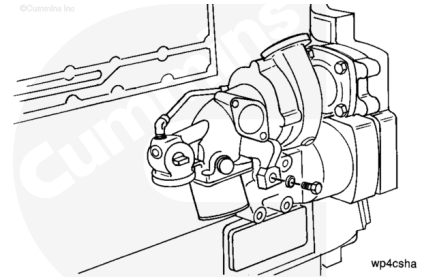

Rail Applications

Slide the p-clip over the loose end of the hose and align the bolt hole of the p-clip with the tapped boss at the lower right corner of the oil cooler housing.


Secure the hose and p-clip to the block using the capscrew.

Tighten the capscrew.

Torque Value: 45 n•m [33 ft-lb]

Make sure **not** to twist or kink the hose.

If necessary, cut the hose to make sure the open end is unobstructed and in clear space.

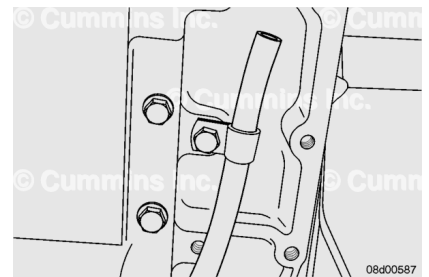

Industrial Applications

Secure the hose and p-clip to the hand hole cover using the hand hole cover capscrew.

Tighten the capscrew.

Torque Value: 45 n•m [33 ft-lb]

Make sure **not** to twist or kink the hose. The hose should go continuously down from the weep hole and its lowest point should be its open end.

If necessary, cut the hose to make sure the open end is unobstructed and in clear space.

