


Trainings ▾

Remove


Rail Applications

- Remove the capscrews, nuts, washers, bracket, and p-clip (1).
- Remove the vent line (2) from the elbow fitting, p-clip, and t-union.

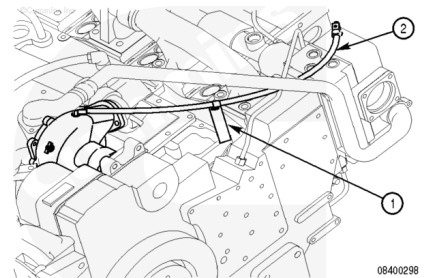

Remove the water inlet connection and gasket (1).

Remove the support bracket (2).

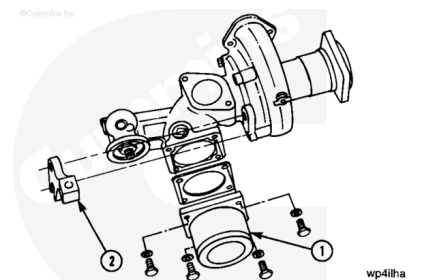

Remove the capscrew from the water pump support bracket.

Remove the three capscrews and the nut from the water pump mounting flange.

Remove the water pump and gasket. Discard the gasket.

Remove the drive shaft (14).

