

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when draining coolant that the coolant is not spilled or drained into the bilge area. Do not pump coolant overboard. If the coolant is not reused, it must be disposed of in accordance with local environmental regulations.

- Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>)
- Remove and disassemble the water pump. Refer to 008-062 (</qs3/pubsys2/xml/en/procedures/20/20-008-062-tr.html>).

©Cummins Inc.

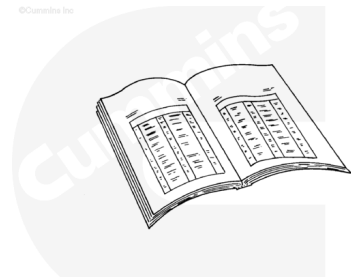


ck800wa

Remove

Use a water pump bearing separator, Part Number 3375326, or equivalent, to disassemble the bearing and shaft assembly.

Remove the retaining ring (1).


- Remove the front bearing (2).
- Remove the rear bearing (3).

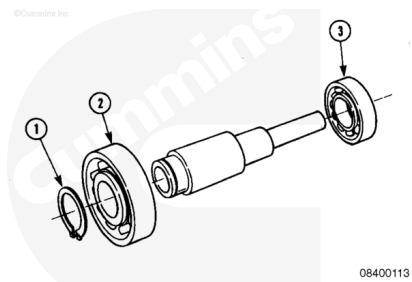

Measure

Measure the shaft outside diameter and the bearing inside diameter. Compare the differences.

Bearing shaft differences			
	mm		in
Clearance	0.003	MAX	0.0001
Interference	0.018	MAX	0.0007

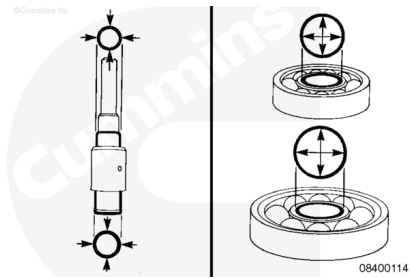


Install


⚠ CAUTION ⚠

The mandrel must make contact on the inner race of the bearing to prevent damage to the bearing.

- Support the shaft.
- Use an arbor press and a water pump bearing mandrel, Part Number ST-658 (4), or equivalent, install the bearings.

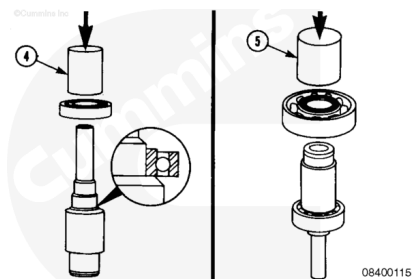

Install the retaining ring.

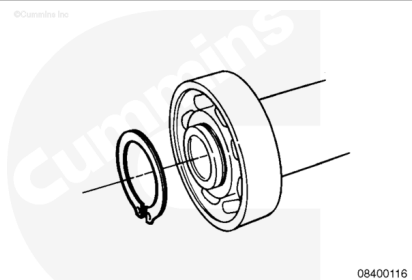

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ CAUTION ⚠

Use caution when filling the cooling system so that the coolant is not spilled into the bilge area. Do not pump coolant overboard. If the coolant is spilled, it must be disposed of in accordance with local environmental regulations

- Assemble the install the water pump. Refer to Procedure 008-062 (</qs3/pubsys2/xml/en/procedures/20/20-008-062-tr.html>).
- Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>).
- Operate the engine and check for leaks.

©Cummins Inc.



ck800wa