


Trainings ▾

Install


Remove the two straight-threaded o-ring plugs from the timing holes in the front cover.

Check the index mark alignment.

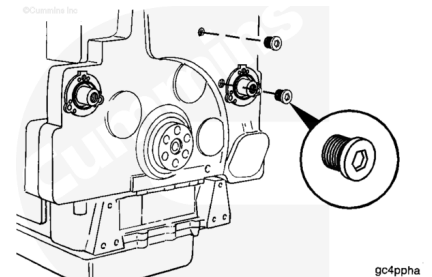

⚠ CAUTION ⚠

Do not use the "A" on the camshaft idler gear for the accessory drive alignment unless the "X" marks on the camshaft and the camshaft idler gears are aligned and centered in the upper timing plug hole. If the "X" marks are not visible in the upper hole, rotate the engine until the "X" marks on the camshaft gear and camshaft idler gear are aligned and centered in the upper timing plug hole.

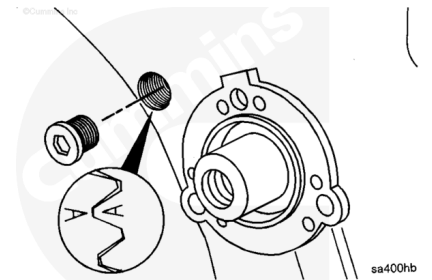


Install the accessory drive so that the "A" on the accessory drive gear is centered in the lower timing plug hole.

Lubricate the bushing in the front gear cover with clean engine oil.

Install the gasket, capscrews, and nut. Tighten the capscrews and the nut.


Torque Value: 48 n•m [35 ft-lb]

Use the above torque value to tighten the capscrews a second time.

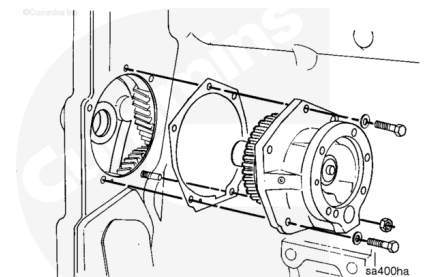


Install the straight-threaded o-ring plugs. Tighten the o-ring plugs.

Torque Value: 25 n•m [221 in-lb]

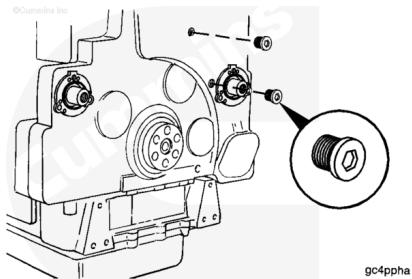

Install the accessory drive seal. Refer to Procedure 001-003 in Section 1 (</qs3/pubsys2/xml/en/procedures/20/20-001-003-tr.html>)

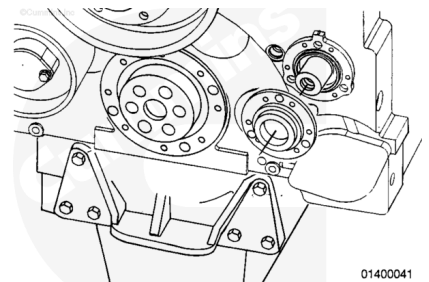

Note : The keyway seal must be installed prior to installation of the key and the accessory drive pulley.

Install the keyway seal (1).

Install the accessory drive pulley woodruff key (2).

