


Trainings ▾

Remove

⚠ CAUTION ⚠

Use a capscrew in the shaft to prevent damage to the shaft threads.

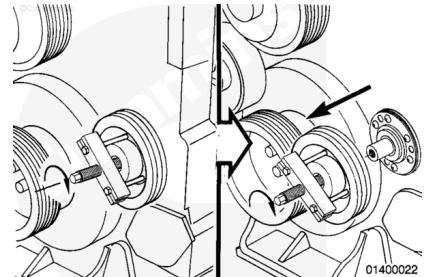

Install a [7/16-20x1 in] capscrew in the shaft.

Use a standard puller, Part Number ST-647, or equivalent.

Remove the accessory drive pulley.


Use a brass drift and remove the woodruff key from the shaft.

Remove the capscrew from the shaft.


Remove the keyway seal.

Inspect for Reuse

Inspect the pulley for cracks, wear in the belt grooves, or other damage.

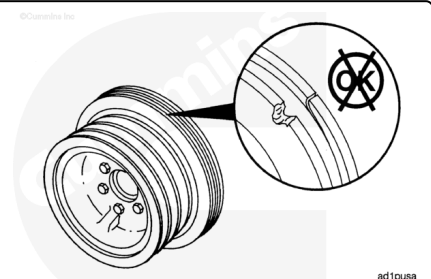


Inspect the mating surface and pulley bore areas for damage.

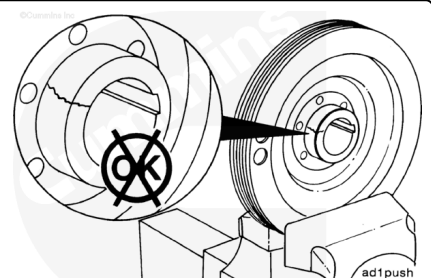


Install

Note : The keyway seal (1) must be installed before installing the woodruff key (2).

Install the keyway seal.

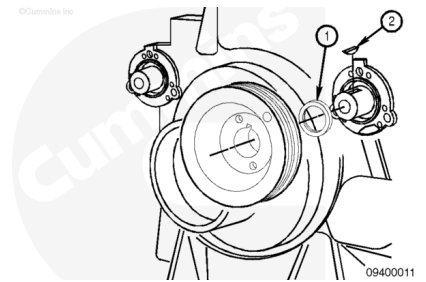


Install the woodruff key.

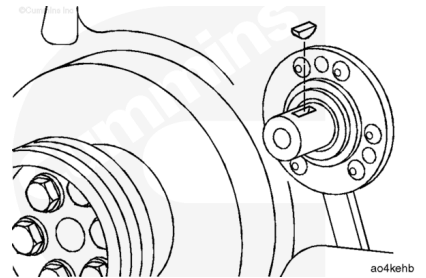

⚠ CAUTION ⚠

**Do not use a hammer to drive the pulley into position.
Damage to the thrust bearing will result.**

Use pulley installation tool kit, Part Number 3376326. Insert the appropriate adapter (7) in the pusher.

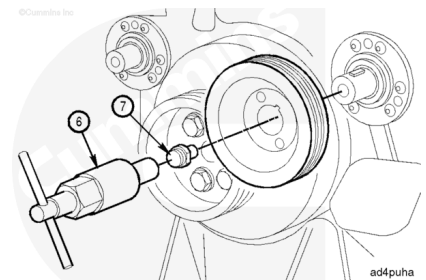

Lubricate the shaft outside diameter and the pulley inside diameter with engine oil.

Align the keyway in the pulley with the key in the shaft. Use the tool to push the pulley on the shaft until it touches the step on the shaft.

