


Trainings ▾

Disassemble

⚠ CAUTION ⚠

The jaws of the vise must have copper plates to reduce the possibility of damage to the pulley.


Place the accessory drive pulley in a vise.

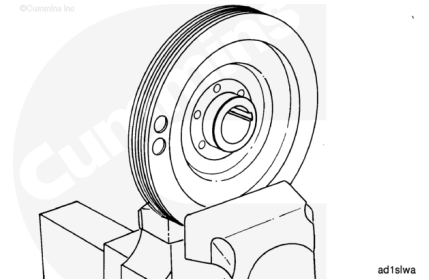


Grind a 1.5 mm [0.059 in] radius on the cutting edge of a 19 mm [0.75 in] chisel.

Position the chisel as illustrated in the graphic and strike the wear sleeve in four places.

This will relieve the press fit and allow the wear sleeve to be removed.

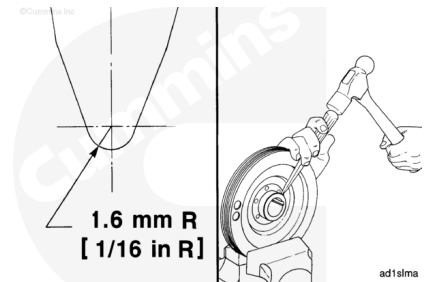


Remove the wear sleeve.

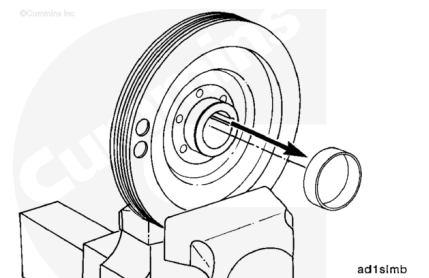


Clean and Inspect for Reuse

Use crocus cloth to clean the wear sleeve area of the pulley.

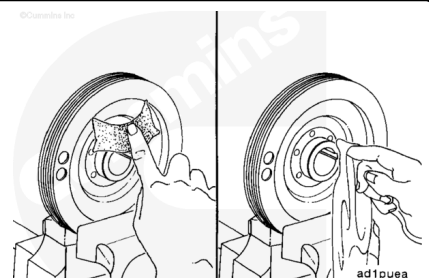


Inspect the wear sleeve surface for damage. Replace the pulley if damaged

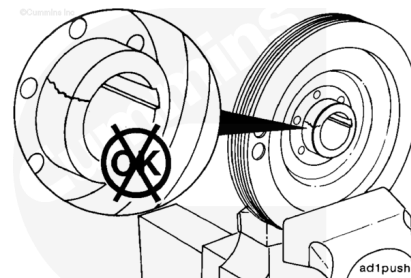

Assemble

Support the accessory drive pulley in an arbor press.

Install the wear sleeve on the pulley with the chamfer on the outside diameter of the sleeve facing away from the pulley.

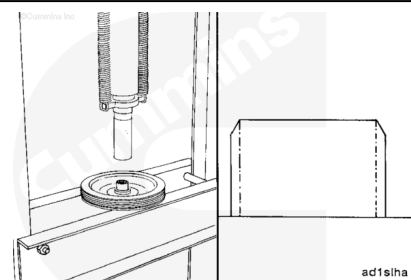

Place a flat steel plate on top of the wear sleeve.

Press the sleeve onto the pulley until the steel plate contacts the pulley.

Inspect the wear sleeve for damage or burrs.

