


Trainings ▾

Install

Replace the alternator drive seal if damaged. Refer to Procedure 001-001 (</qs3/pubsys2/xml/en/procedures/20/20-001-001-tr.html>).

⚠ CAUTION ⚠

Do not use a hammer to drive the pulley into position. The thrust washers will be damaged.

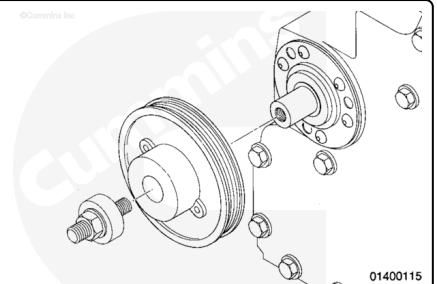

Use the pulley installation kit, Part Number 3376326, or equivalent. Install the correct adapter in the pusher.

Install the pulley on the shaft. The pulley **must** touch the step on the shaft.

Remove the tool and adapter.

Remove the capscrew from the water pump drive.

Install the plastic plug that protects the threads.

