

Trainings ▾

Preparatory Steps

- Remove the belt guard (if installed). Refer to Procedure 008-001 (</qs3/pubsys2/xml/en/procedures/20/20-008-001.html>).
- Remove the alternator belt. Refer to Procedure 013-005 (</qs3/pubsys2/xml/en/procedures/20/20-013-005-tr.html>).




Remove

Remove the plastic plug at the end of the shaft.

Insert the adapter, Part Number 3376089, in the shaft to prevent damage. The adapter is included with the pulley installation tool, Part Number 3376326.


Note : If the adapter is not available, a [3/4-16 inch] capscrew with a head ground smaller than the pulley inside diameter can be used.

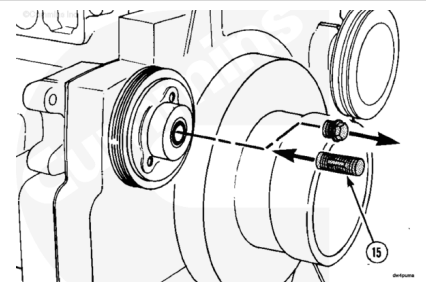

Put the puller on the pulley.

Remove the pulley.

Remove the adapter.

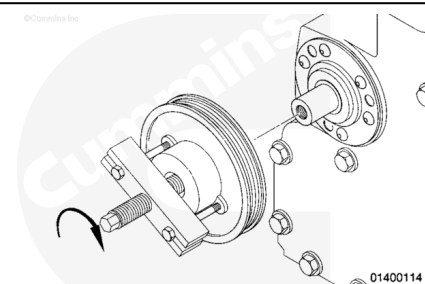

Clean and Inspect for Reuse




When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the alternator drive pulley. Dry with compressed air.

Inspect the pulley for nicks, cracks, excessive wear in the belt grooves, and other damage.

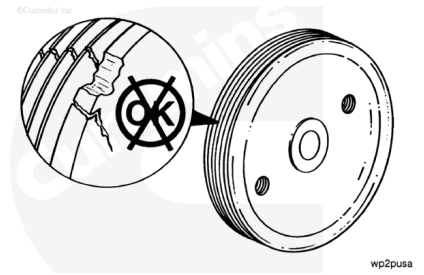

Install

Replace the alternator drive seal if damaged. Refer to Procedure 001-001 (/qs3/pubsys2/xml/en/procedures/20/20-001-001-tr.html).


⚠ CAUTION ⚠

Do not use a hammer to drive the pulley into position. The thrust washers will be damaged.

Use the pulley installation kit, Part Number 3376326, or equivalent. Install the correct adapter in the pusher.


Install the pulley on the shaft. The pulley **must** touch the step on the shaft.

Remove the tool and adapter.

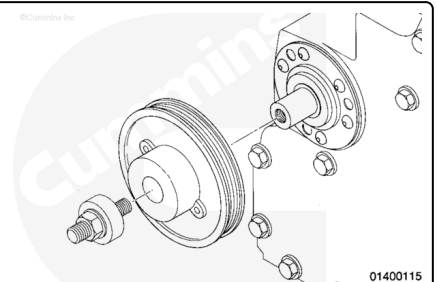

Remove the capscrew from the water pump drive.

Install the plastic plug that protects the threads.

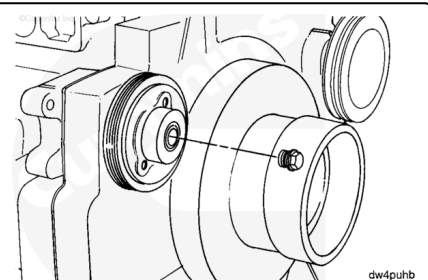

Finishing Steps

- Install the alternator belt. Refer to Procedure 013-005 (</qs3/pubsys2/xml/en/procedures/20/20-013-005-tr.html>).
- Install the belt guard (if installed). Refer to Procedure 008-001 (</qs3/pubsys2/xml/en/procedures/20/20-008-001.html>).

