


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

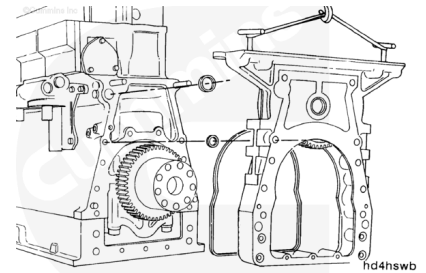

Note : If an SAE 1 flywheel housing option is used, there must be two [5/8-11 x 6 1/2 inch] studs, Part Number 3065777, installed in the upper holes of the cylinder block.

Apply a small amount of Lubriplate® 105, multi-purpose lubricant, or gasket adhesive on the seal ring groove, the capscrew counterbores, and the dowel counterbores on the block side of the lower housing.

Install the new rectangular seal ring, with the joint at the top into the groove in the lower housing.

Install the ten new capscrew seals into the capscrew counterbores in the lower housing.

Use Lubriplate® 105, multi-purpose lubricant, or equivalent, on the main rifle seal.


Install the main rifle seal into the counterbore surrounding the main rifle drilling.

Install the lower housing of the rear gear train onto the dowel pins.

Check the alignment of all capscrews seals, rectangular seal, and the main oil rifle seal.


Use two 5/8-11x5 inch capscrews with flat washers in the locations shown.

Tighten the capscrews alternately to pull the lower housing to the block.

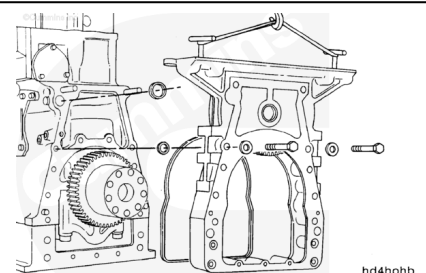

Use a dial indicator. Be sure the two capscrews are holding the lower housing firmly against the cylinder block. Check the gear lash.

mm		in
0.05	MIN	0.002
0.51	MAX	0.015

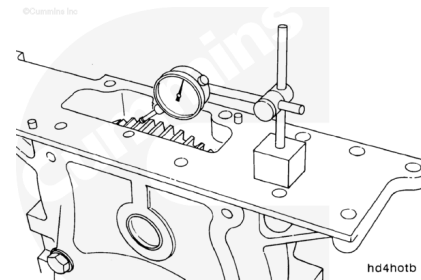

If the gear lash is above acceptable limits, the rear gear train lower idler gear or crankshaft gear **must** be replaced.

Note : Replace the idler gear first.

If the gear lash is below acceptable limits (or if the gear replacement does **not** correct the lash), replace the housing.