


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

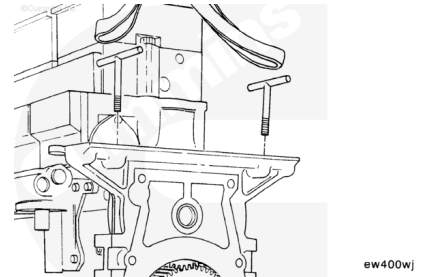

Use a hoist, two tee handles, and a lifting sling. Install the tee handles. Adjust the hoist until there is tension in the lifting sling.

Use a mallet to tap the lower housing of the rear gear train off the two locating dowel pins in the rear face of the cylinder block.

Remove and discard the rectangular seal, bolt seals, and main oil rifle seal.

