


Install


Use gasket adhesive on the gasket. Do **not** use an excessive amount of adhesive on the gasket.

Align and install the rear gear train upper housing gasket to the rear gear train lower housing.

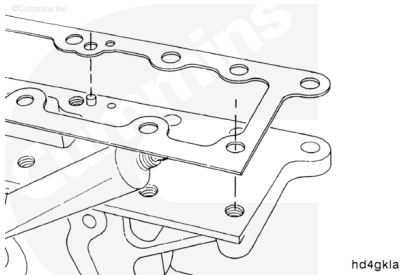

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

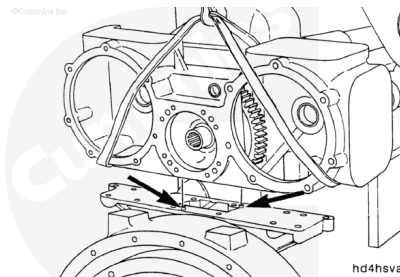


⚠ CAUTION ⚠

Use extra care when aligning the upper housing onto the lower housing to prevent gasket damage.

Use the dowel pins to align the upper housing onto the lower housing.

Use **only** SAE Grade 8 capscrews to install the upper housing. Install the following capscrews according to the table below.


Ref	Location	Part No.	Size [Inch]	Quantity
1	Top-Front	3202224	1/2-13 x 9 1/4	2
2	Top-Rear	3202223	1/2-13 x 7 1/2	2
3	Internal	169195	1/2 -13 x 1 1/4	4

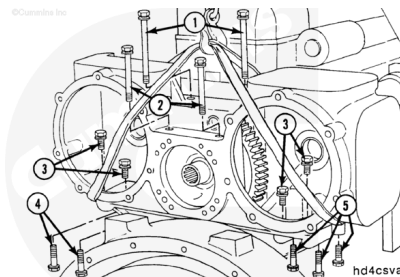

4	Bottom-Left Side	3202222	1/2-13 x 1 3/4	2
5	Bottom-Right Side	3202222	1/2-13 x 1 3/4	3


Use the sequence shown to tighten the capscrews.

Torque Value:	Step 1	70 n.m [50 ft-lb]
	Step 2	150 n.m [110 ft-lb]

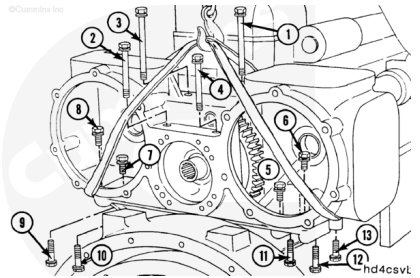

Use a dial indicator. Be sure the lower idler gear is secure. If the gear is **not** secure, the indicator reading includes the lower idler gear to the crankshaft gear backlash.


Measure the backlash between the center drive gear and the lower idler gear.

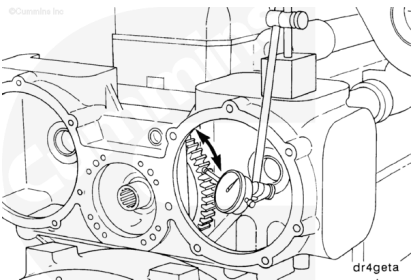

mm		in
0.05	MIN	0.002
0.51	MAX	0.020


If the gear lash is less than the specified limits, thicker gaskets are available. Do **not** use more than two gaskets to correct the backlash.

If the gear lash is greater than the specification and the thinnest gasket is used, the upper and lower gears **must** be replaced.

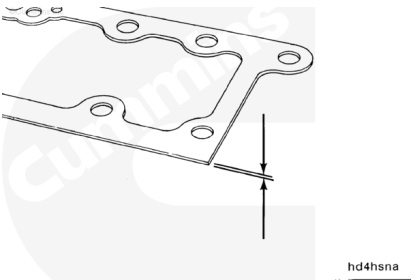


Install the outer hydraulic pump support drive.

Use Lubriplate® 105, or equivalent. Lubricate the outer hydraulic pump support bushings in the upper housing. Lubricate the bushing surfaces on both shafts in the outer hydraulic pump support drive assemblies.

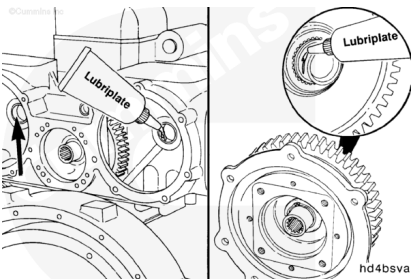


Note : Some engines do not have an outer hydraulic pump support drive. These engines require a cover plate and a non-splined shaft, but do not use a hydraulic gear.

Use gasket adhesive sparingly. Install the hydraulic support housing gaskets on both support mounting flanges on the outer hydraulic pump support drive assemblies.

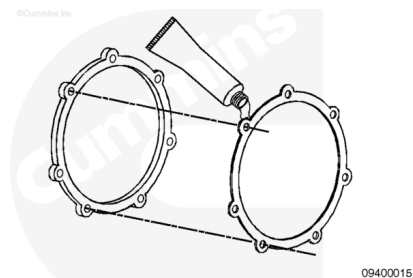


If using the outer hydraulic pump support cover plate, install the non-splined shaft onto the cover plate. Use a [3/8-16 x 1-1/4 in] capscrew.

Torque Value: 40 n•m [30 ft-lb]

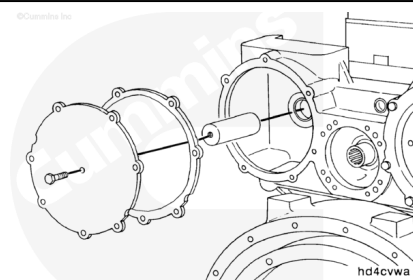

Use three [7/16-14 x 4 inch] guide studs. Install one outer hydraulic pump support drive assembly.

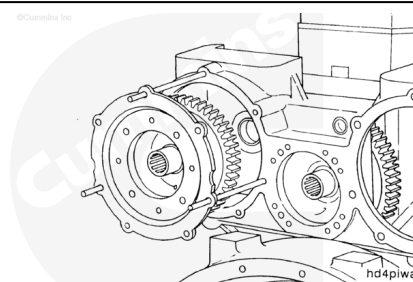

Install four capscrews. Hand-tighten the capscrews. Remove the guide studs. Install the remaining three capscrews. Use the sequence and apply torque as shown.

Torque Value: 70 n•m [50 ft-lb]

