


Trainings ▾

Disassemble

Note : The gear should be removed from the shaft only when the gear or the shaft must be replaced.

Support the gear with the oil hole positioned as shown.


Use an arbor press to remove the gear.

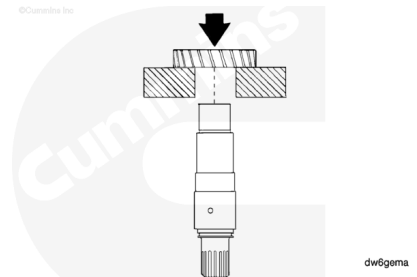

Inspect

Measure the gear inside diameter.


Gear Inner Diameter		
mm		in
39.725	MIN	1.564
39.751	MAX	1.565

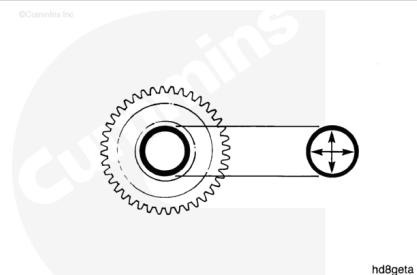

If the gear is **not** within specifications, it **must** be replaced.

Measure the shaft outer diameter.

Shaft Outer Diameter		
mm		in
39.792	MIN	1.566
39.802	MAX	1.567

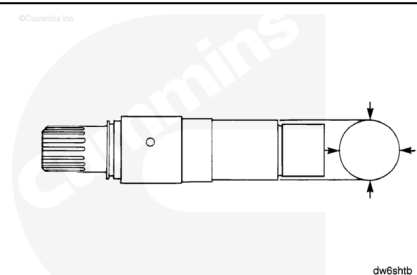

If the shaft is **not** within specifications, it **must** be replaced.

Assemble

Use Loctite® 609 or equivalent. Apply a smooth coating on the inside diameter of the gear.

Support the gear.

Use an arbor press to press the shaft in the gear until it touches the shoulder of the shaft.

