

Trainings ▾


Preparatory Steps

- Remove the hydraulic pump support from the rear gear drive (upper assembly). Refer to Procedure 009-024 (/qs3/pubsys2/xml/en/procedures/20/20-009-024-tr.html).



Remove

Use a blind bushing puller to remove the bushing.

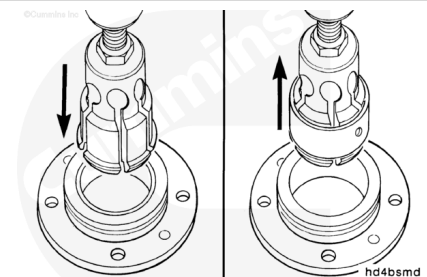


Inspect for Reuse

Measure the bushing bore.


Note : If the bushing bore is not within specifications, replace the support.

mm		in
53.86	MIN	2.121
53.92	MAX	2.123

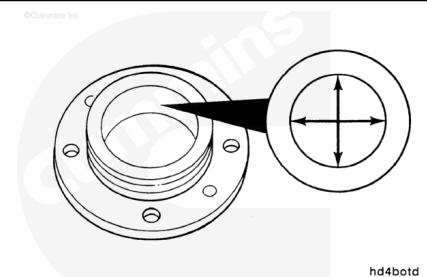


Install

Use a bushing mandrel and a press. Install the bushing flush with the support or **no more** than 5.08 mm [0.200 in] below the surface.

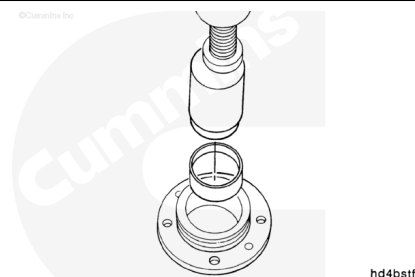

Measure the bushing inside diameter again.

mm		in
47.60	MIN	1.874
47.68	MAX	1.877

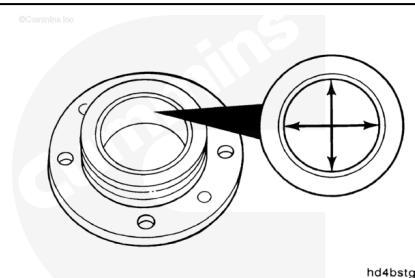

Note : If the bushing is not within specifications, replace the support.


Assemble

Use Loctite® 609 or equivalent. Apply a smooth coating on the inside diameter of the gear.

Support the gear.

Use an arbor press to press the shaft in the gear until it touches the shoulder of the shaft.

Align and install the gear onto the drive shaft.

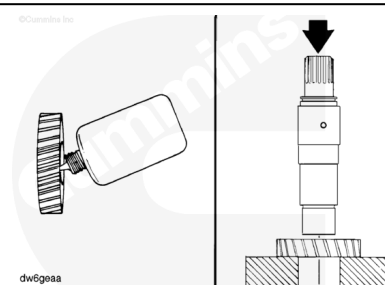

Finishing Steps

- Install the pump support into the rear gear drive (upper assembly). Refer to Procedure 009-024 (</qs3/pubsys2/xml/en/procedures/20/20-009-024-tr.html>).



ck800wa

Last Modified: 30-Jun-2006
