


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

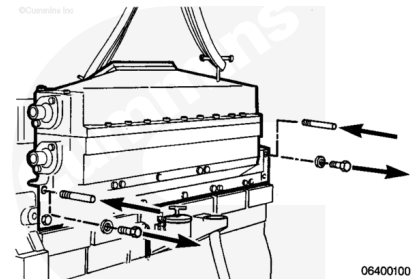


Remove two mounting capscrews. Install two 9.525 mm [0.375 in] guide studs.

Use a hoist, two tee handles, and a lifting sling. Attach the tee handles, sling, and hoist. Raise the hoist until there is tension on the sling.

Remove the remaining capscrews and the aftercooler assembly.

Remove and discard the gaskets.

Remove and discard the aftercooler bolt seals from the aftercooler housing.

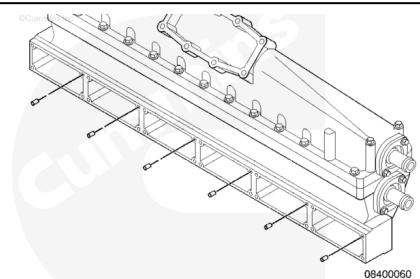

Rail Applications

Remove the 24 capscrews and intake manifold.

