

Trainings ▾

Preparatory Steps

Clean the area around the crossover pipe to prevent debris from entering the engine.



Remove


with Mechanically Actuated Injector

Remove the four mounting capscrews at the top of the air crossover.

Loosen the four capscrews at the bottom of the air crossover until there is clearance between the washer and the crossover.

Remove the air crossover hose clamps and slide the hose down the turbocharger outlet.

Remove the air crossover.

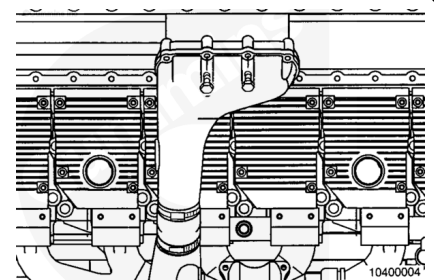


with Electronically Actuated Injector

Remove the four mounting capscrews at the air crossover connection.

Remove the eight capscrews from the air crossover to turbocharger connection.

Remove the air crossover tube.

Discard the o-ring and gasket.

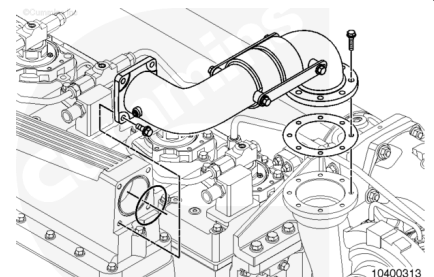


Clean and Inspect for Reuse

with Mechanically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

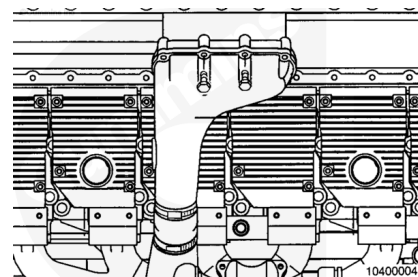


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean and dry the compressor.

Use compressed air to dry the parts.


Inspect the air crossover for cracks, breaks, holes, and worn bolt holes.

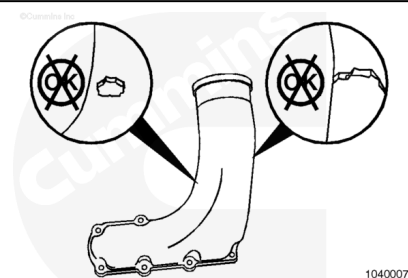

Marine Applications

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

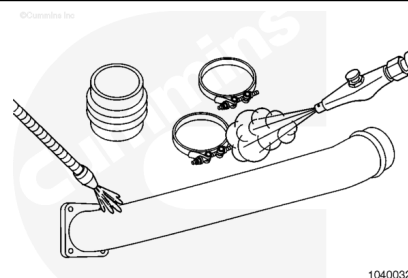

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the compressor.


Use compressed air to dry the parts.

Note : The marine air crossover hose (3) is a different material hose than the standard QSK19 hose.

Inspect the crossover hose for cracks.

Inspect the bore for any blockage.


Inspect the o-ring groove on the mounting flanges and the hose clamps (4) for any wear or damage.

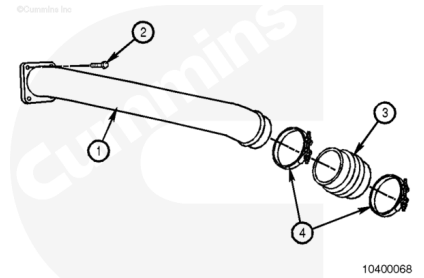

Inspect the air crossover for cracks or damaged sealing surfaces.

Inspect the link strap for damage.


Replace any damaged components.

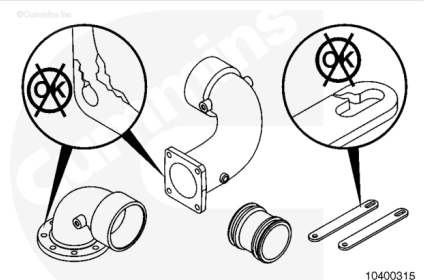

with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

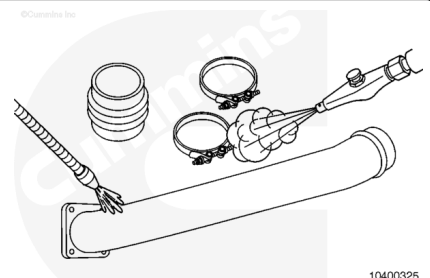

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean and dry the compressor.

Use compressed air to dry the parts.

Install


with Mechanically Actuated Injector

Install the hose and the two clamps on the air crossover.

Install the air crossover.

Slide the hose down over the turbocharger. Position the clamps.

Install the gasket and capscrews. Hand tighten the capscrews.

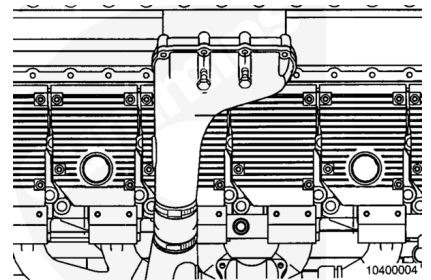


Tighten the capscrews in the sequence shown in the illustration.

Torque Value: 45 n•m [33 ft-lb]

Tighten the hose clamps.

Torque Value: 8 n•m [71 in-lb]

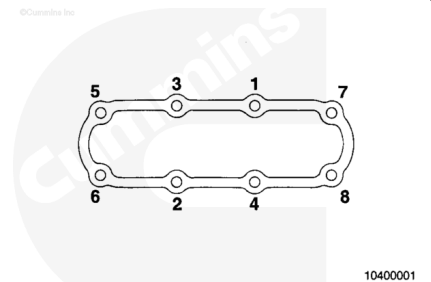


Marine Applications

Use new gaskets, o-ring, and install the air crossover tube.

Install the four mounting capscrews at the air crossover to aftercooler connection.

Tighten the capscrews in a crisscross pattern evenly.

Torque Value: 45 n•m [33 ft-lb]

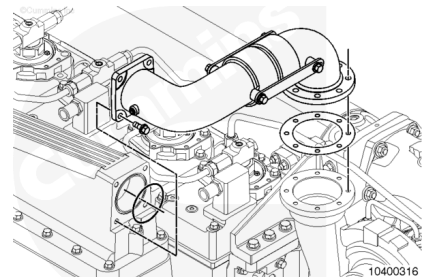

Apply anti-seize compound to the threads of the capscrews.

Install and tighten the eight capscrews for the air crossover to turbocharger connection in a crisscross pattern evenly.


Torque Value:

Turbocharger Connection Capscrews

1. 50 n•m [38 ft-lb]

Position and tighten the hose clamps.


Torque Value: 8 n•m [71 in-lb]

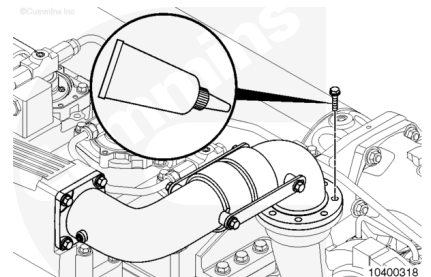

Finishing Steps

Operate the engine. Check for leaks.

©Cummins Inc.

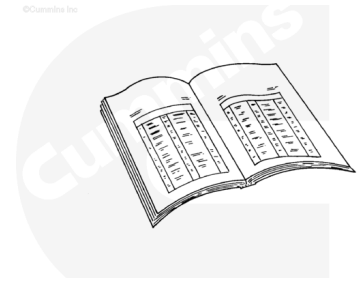

ck800wa

Last Modified: 16-Nov-2018
