


Trainings ▾

Remove

Rail Applications

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

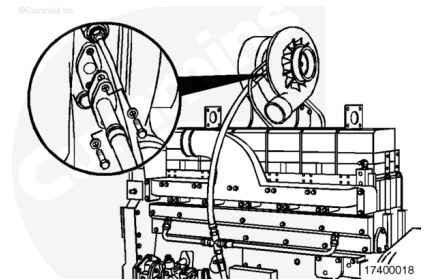


Intake Manifold - Remove


Remove the turbocharger drain line from the turbocharger.

Remove the turbocharger drain line from the scavenge cross.

Discard the face seal o-ring.

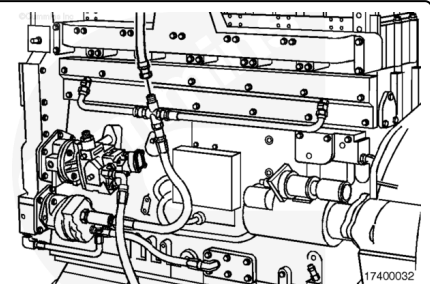


Loosen the hose clamp and remove the hose.

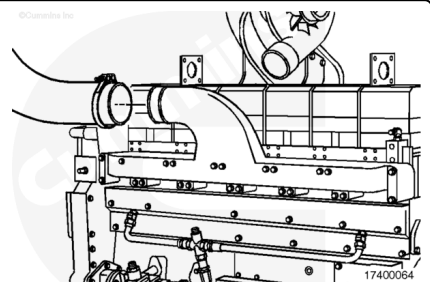

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

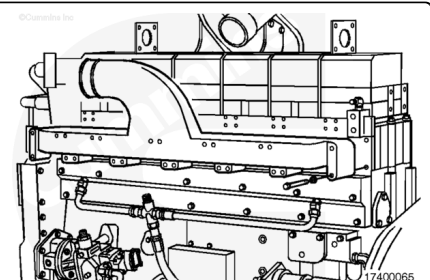


Remove the 24 capscrews and intake manifold.

Install

Rail Applications

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

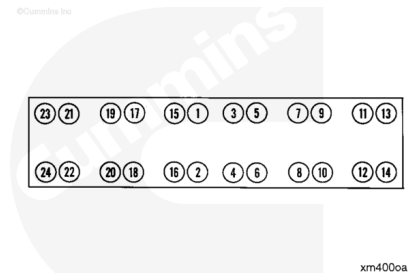


Intake Manifold - Install

Install the intake manifold and 24 capscrews. Tighten the 24 capscrews in the sequence shown.

Torque Value: 45 n·m [35 ft-lb]

Install the turbocharger drain line to the turbocharger.


Torque Value: 45 n·m [35 ft-lb]

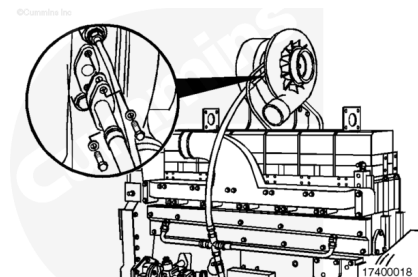

Install the face seal o-ring.


Install the turbocharger drain line to scavenge cross.

Torque Value: 80 n·m [60 ft-lb]

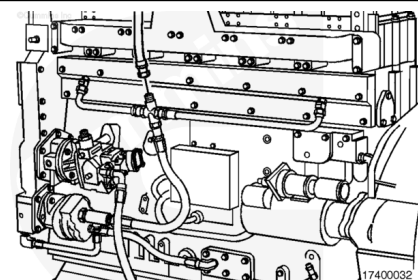

Install hose and tighten hose clamp.

Torque Value: 8 n·m [75 in-lb]

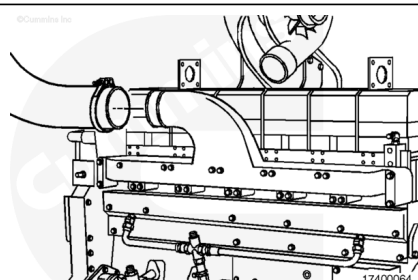

Last Modified: 03-Nov-2015