


Trainings ▾

Measure


Install a vacuum gauge or water manometer in the intake piping between the turbocharger and the air filter. The gauge **must** have a capacity of 1270 mm H₂O [50 inch H₂O].

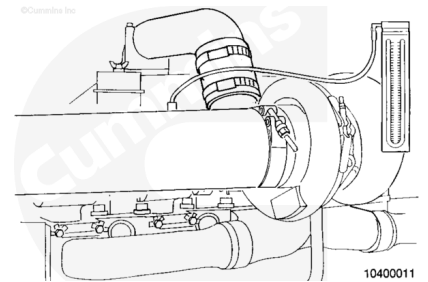

The gauge adapter (or fitting) **must** be installed at a 90 degree angle to the air flow in a straight section of pipe. The adapter location **must** be at least one pipe diameter before the turbocharger.

The adapter **must not** extend through the wall of the air intake tubing.

If the adapter **must** be located in a curved section of tubing, locate it on the flat side of the curve, **not** in the radius.

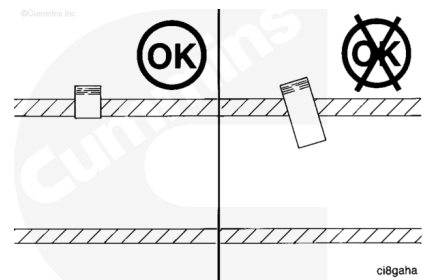


Operate the engine at full throttle and rated rpm with maximum load. Record the reading of the gauge or manometer.

Note : Restriction **must not** exceed 635 mm H₂O [25 inch H₂O].

Maximum Operating Air Restriction (Dirty Filter):


635 mm H₂O [25 inch H₂O]

Note : Stall speed is **not** full power. Operate the engine at rated rpm and load.

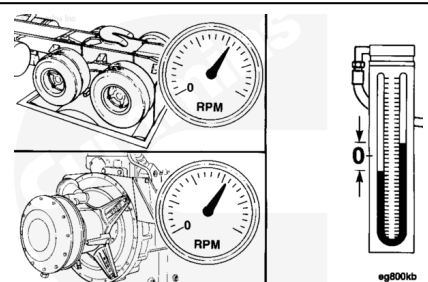


If the restriction exceeds specifications, do the following:

Replace or clean the air filter element. Refer to the equipment manufacturer's instructions.

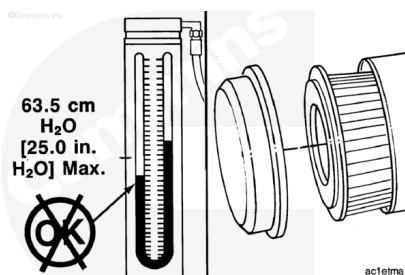

Inspect the intake air piping for damage. Refer to the equipment manufacturer's instructions.

Note : If no damage is visible, check the size and routing of the intake air piping. Refer to the Installation Recommendations.

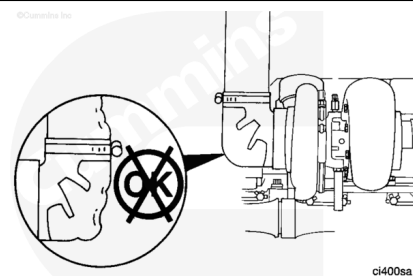

Remove the test equipment.

