


Trainings ▾

General Information


Inspection of the turbocharger is recommended at engine half life to rebuild.

Half life rebuild varies by application. Contact a Cummins® Authorized Repair Location if **not** sure of this service.

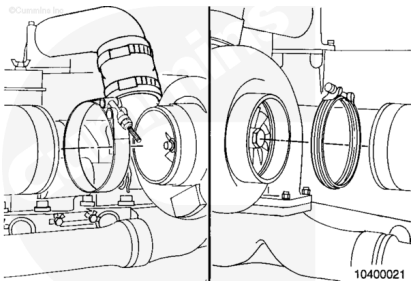

Maintenance Check

Remove the intake and exhaust piping from the turbocharger.

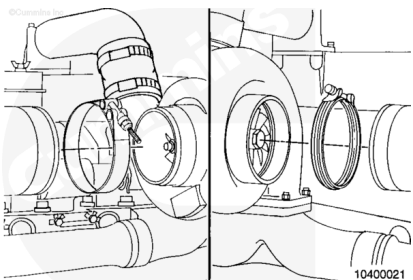


Inspect the turbocharger compressor impeller for damage.

Inspect for broken, bent, or damaged blades.


Do **not** attempt to repair or straighten the blades.

Contact a Cummins® Authorized Repair Location if damage is found.

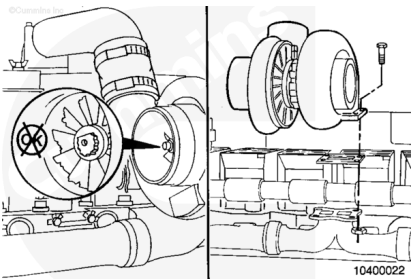

Use dial depth gauge, Part Number ST-537, or a dial indicator to measure the axial motion (end-to-end).

Compressor Inlet Axial Endplay			
	mm		in

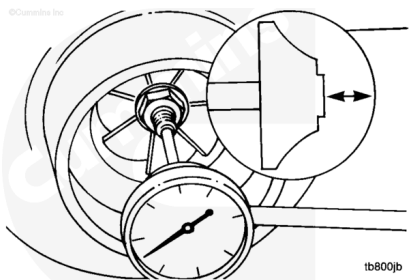


Holset® HX82/HX8 3/HE800 Turbocharg er	0.025	MIN	0.001
	0.152	MAX	0.006

Make sure movement is within MIN/MAX Total Indicator Reading (TIR) values shown above.

Note : If the end clearance exceeds the specifications, the turbocharger must be replaced or rebuilt. Contact a Cummins® Authorized Repair Location.

Measure the radial clearance (side-to-side) at the compressor impeller nose using a dial gauge.

Compressor Impeller Radial Endplay			
	mm		in
Holset® HX82/HX8 3/HE800 Turbocharg er	0.254	MIN	0.01
	0.787	MAX	0.031

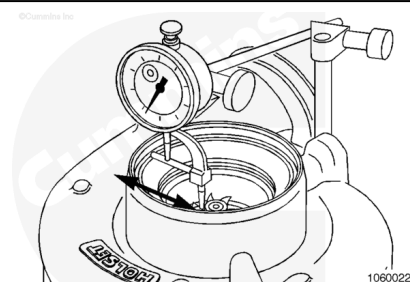

Make sure movement is within MIN/MAX Total Indicator Reading (TIR) values shown above.

Note : If the radial clearance exceeds the specifications, the turbocharger must be replaced or rebuilt. Contact a Cummins® Authorized Repair Location.