


Trainings ▾

Remove

All Applications Except Marine and Rear Mount Rail

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

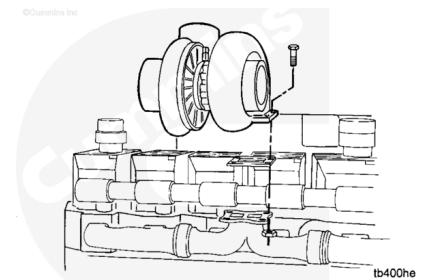


Remove the mounting capscrews, nuts, and turbocharger.

Remove and discard the gasket.

Rear Mount Rail Applications

Remove the mounting nuts and the turbocharger.


Remove the turbocharger and discard the gasket.

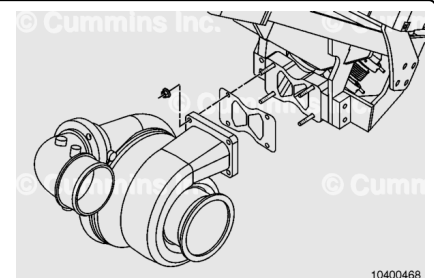

Disassemble

Note : Electronically actuated injector engines are equipped with a turbocharger speed sensor.

Remove the speed sensor from the turbocharger, if equipped. Use the following procedure in Section 19 of the Troubleshooting and Repair Manual Electronic Control System QSK19 CM850 Modular Common Rail System Series Engine, Bulletin 4021493. Refer to Procedure 019-390 in Section 19. (</qs3/pubsys2/xml/en/procedures/13/13-019-390.html>)

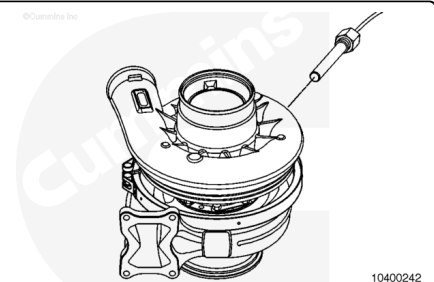


Loosen and remove the v-band clamp securing the compressor housing.

⚠ CAUTION ⚠


The compressor blades can be easily damaged with the compressor cover removed.

Note : Turbocharger HX83 uses a titanium compressor wheel. The edge of the wheel is very sharp. Handle the compressor wheel with care.

Use a mallet to gently tap the compressor cover to remove the cover from the turbocharger.

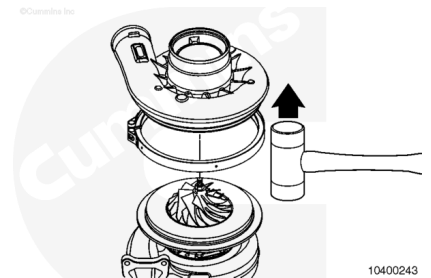


Remove the o-ring and discard.

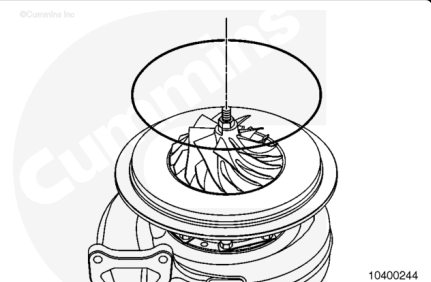

⚠ CAUTION ⚠

The impeller blades can be easily damaged when the compressor cover is removed.

If the compressor cover has an inlet baffle, it can be removed with a flat tip screwdriver. Pry the retaining ring up and remove the retaining ring.

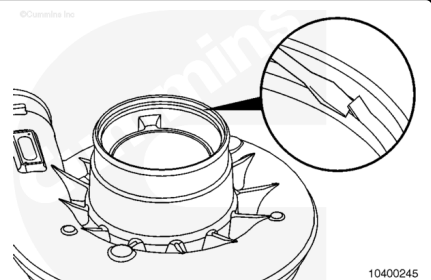


⚠ CAUTION ⚠


The turbine blades can be easily damaged when the turbine housing is removed.

Remove the turbine housing by bending the lock plate tabs away from the capscrew heads.

Remove the capscrews.

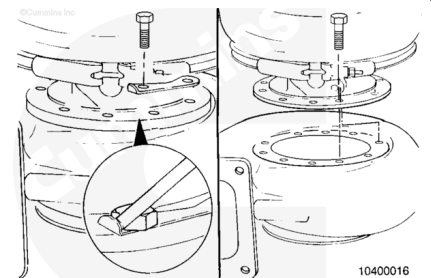


Make sure the turbine wheel rotates freely inside the turbine housing. Tap on the turbine housing with a mallet to separate the turbine housing from the bearing housing.

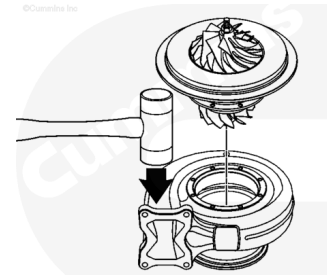

10400246

Remove the oil supply fittings and the coolant lines from the center housing assembly.

Discard the o-rings.

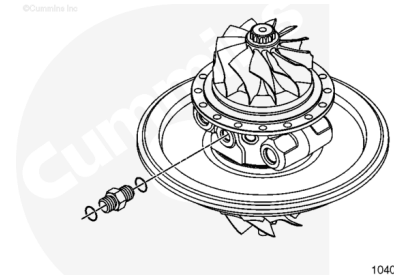

10400247