


Trainings ▾

Remove

All Applications Except Marine and Rail

Remove the mounting capscrews, nuts, and the turbocharger.

Remove and discard the gasket.

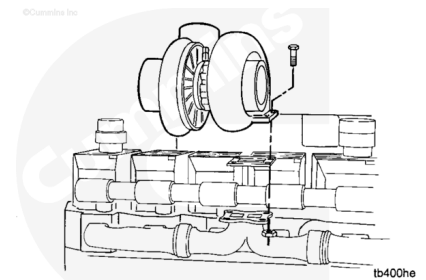


Marine Applications

Loosen clamps from turbocharger coolant return line then slide clamps to side.

Remove P-clip.


Remove turbocharger coolant return line from engine.

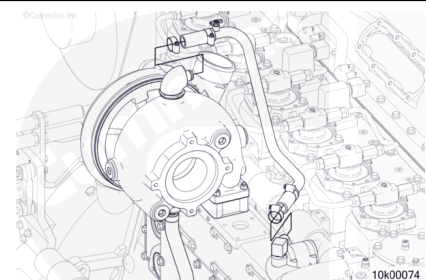

For engines with auxiliary cooler:


Loosen clamps from turbocharger coolant supply line then slide clamps to side.

Remove turbocharger coolant supply line from engine.

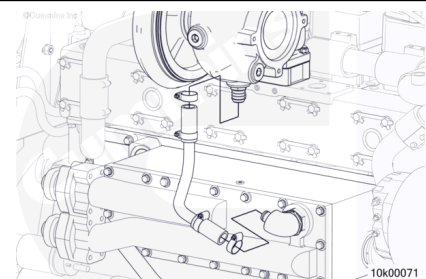

For engines without auxiliary cooler:


Loosen clamps from turbocharger coolant supply hose and remove hose.

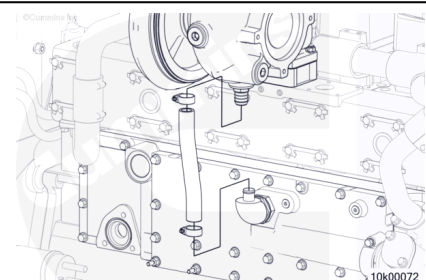


Remove the four nuts and washers from the turbocharger to exhaust manifold flange.

If equipped, remove turbocharger spacer.


Remove turbocharger and discard gasket(s).

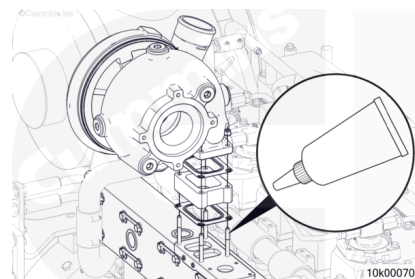


Remove the turbocharger bearing housing coolant supply line.

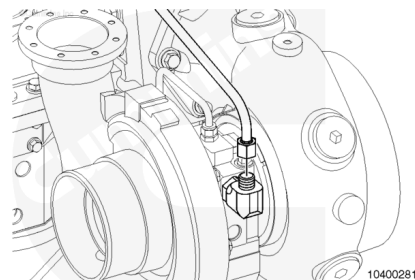


Remove the turbocharger bearing housing coolant return line.

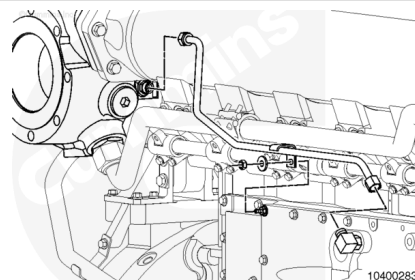


Remove the turbocharger turbine housing coolant return line from the turbocharger and coolant bypass line.

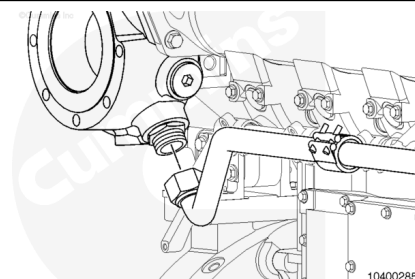

Remove the six capscrews, washers, and nuts from the turbocharger to exhaust manifold flange.

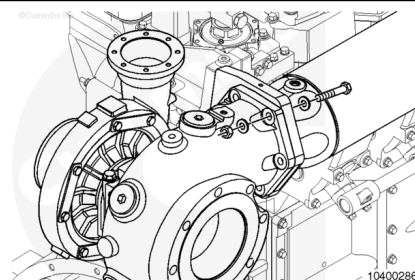

Remove the three capscrews from the support bracket to compressor housing.

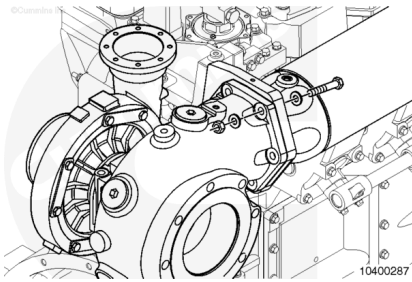

Install a lifting eye bolt at the turbocharger turbine housing and attach an approved lifting device.

Support the weight of the turbocharger.

