


## Trainings ▾

### Measure

Install a 0 - 2030 mm-Hg [0 - 80 in Hg] manometer (or gauge) in the straight threaded plug hole in the aftercooler housing.

Do **not** drill and tap a hole in the aftercooler cover. A faulty reading can result if the aftercooler core is leaking.

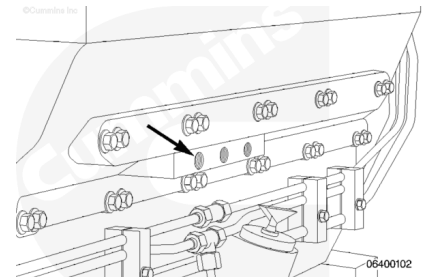

Obtain the control parts list (CPL) number from the engine dataplate and the fuel pump code from the fuel pump dataplate.


Engine performance specifications and fuel system calibration values are listed for specific engine CPL and fuel pump codes in the current publications of the following:

1. Fuel Pump Calibration Values
2. Injector Parts Flow and Cross Reference
3. Engine Data Sheets.




Operate the engine at rated rpm and full load. Compare the value to specifications.

**Note : Stall speed is not full power.**

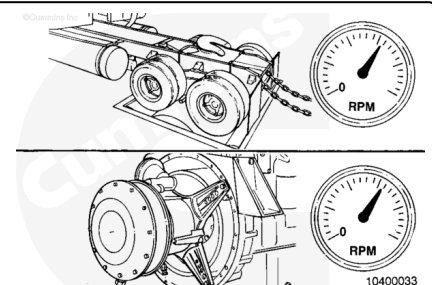

Use the following procedure if the engine does **not** reach specifications. If the engine does not reach specifications, contact an authorized Cummins repair location.

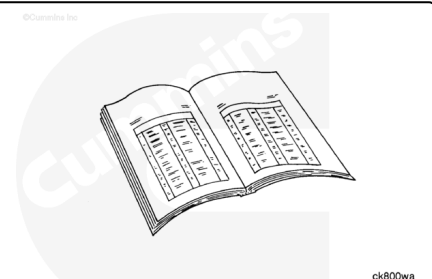

---

**Last Modified: 05-Nov-2013**

---