


Trainings ▾

Remove

Marine Applications

⚠ CAUTION ⚠

Do not remove insulation from inside of turbocharger heat shield. Insulation is permanently affixed to the heat shield.

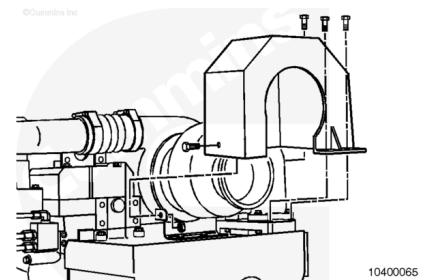

Remove the turbocharger heat shield mounting capscrews.

Remove the turbocharger heat shield.