


Trainings ▾

Remove

Marine Applications

⚠ CAUTION ⚠

Do not remove insulation from inside of turbocharger heat shield. Insulation is permanently affixed to the heat shield.

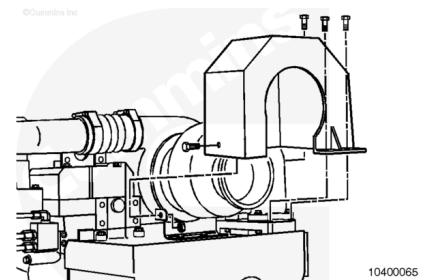

Remove the turbocharger heat shield mounting capscrews.


Remove the turbocharger heat shield.

Clean

Marine Applications

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

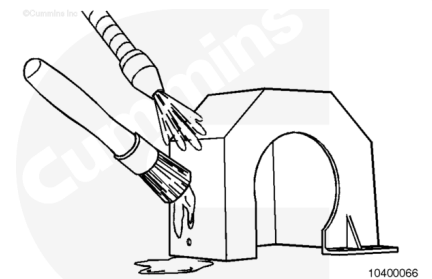


Use solvent to clean the turbocharger heat shield.

Note : Take care not to damage the turbocharger heat shield insulation.

Inspect for Reuse

Marine Applications

Inspect the turbocharger heat shield for cracks, holes, and damaged bolt holes.

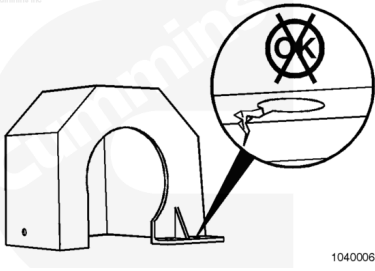

10400067


Install

Marine Applications

Install the turbocharger heat shield.

Install and tighten the turbocharger heat shield mounting capscrews.

Torque Value: 35 n•m [25 ft-lb]

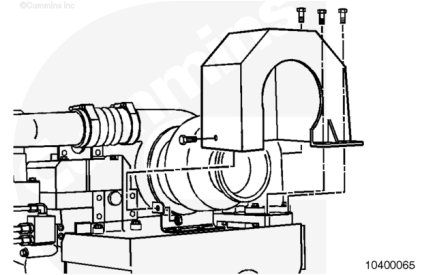

10400065