


Trainings ▾

Remove

Note : The QSK60 engine is shown, other engines are similar.


Disconnect the latches on the front and rear turbocharger heat shields, which are supporting the top of the aftercooler heat shield.

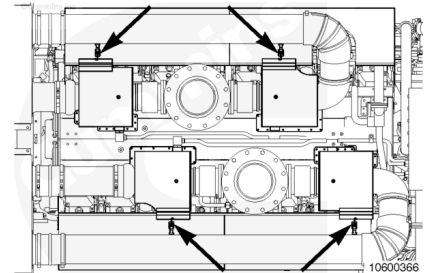

Note : There are two alignment pins. The two shields **must** be separated from each other before removal.

Disconnect the latch connecting the front and rear aftercooler heat shields.

Disconnect the latches on the bottom rail.

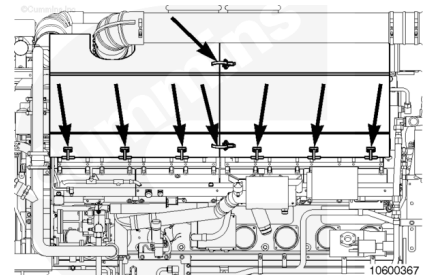

Install

Position the rear aftercooler heat shield on the bottom rail first and latch it to the rear turbocharger heat shield.

Then position the front aftercooler heat shield on the bottom rail and latch it to the front turbocharger heat shield, using the alignment pins.

Latch the bottom of both aftercooler heat shields to the bottom rail.

