

Trainings ▾

Preparatory Steps

Rail Applications

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.



⚠ WARNING ⚠


Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Remove the turbocharger. Refer to Procedure 010-033 (</qs3/pubsys2/xml/en/procedures/20/20-010-033-tr.html>)).
- Drain the coolant. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>)).


Remove

Rail Applications


Remove the four capscrews from the exhaust transfer connection and support brackets.

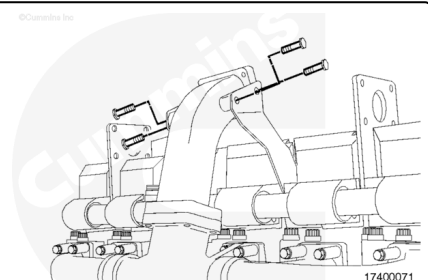


Remove the four capscrews, nuts, gasket, and exhaust transfer connection from the exhaust manifold. Discard gasket.

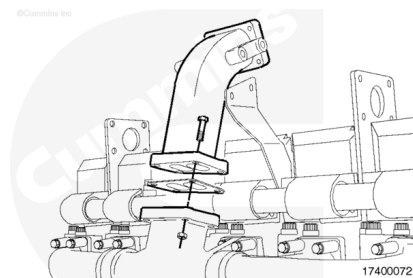


Remove the number 2 and number 3 rocker lever covers. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/20/20-003-011-tr.html>).

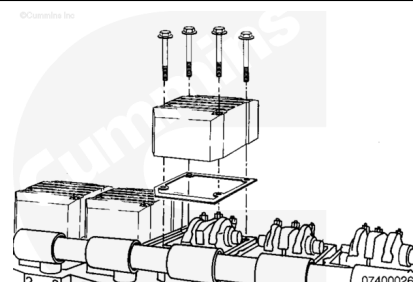


Remove the number 2 and number 3 rocker lever assemblies. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/20/20-003-009-tr.html>).

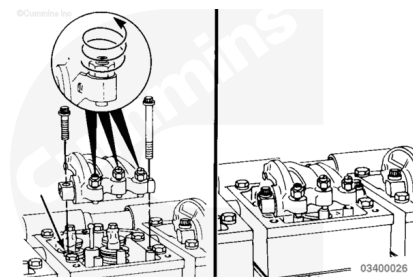

Remove the number 2 and number 3 rocker lever housings. Refer to Procedure 003-013 (</qs3/pubsys2/xml/en/procedures/20/20-003-013-tr.html>).

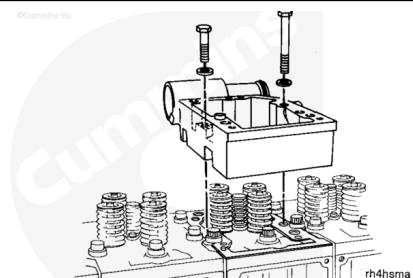


Remove the four capscrews, and two exhaust transfer connection brackets from the rocker lever housings.

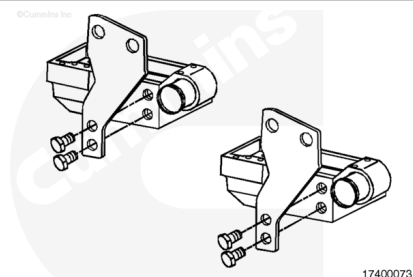

Inspect for Reuse

Rail Applications

Inspect the exhaust transfer connection and brackets for cracks or other damage.

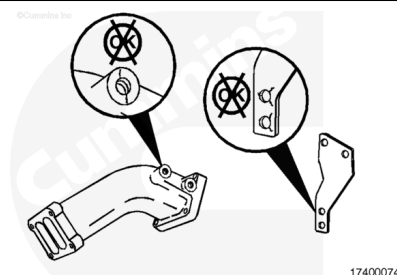


Install


Rail Applications

Install the four capscrews and two exhaust transfer connection brackets on the rocker lever housings. Tighten the capscrews.


Torque Value: 135 n·m [100 ft-lb]

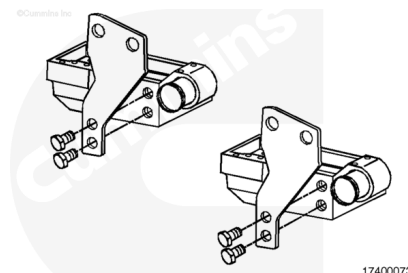

Install the number 2 and number 3 rocker lever housings. Refer to Procedure 003-013 (</qs3/pubsys2/xml/en/procedures/20/20-003-013-tr.html>).

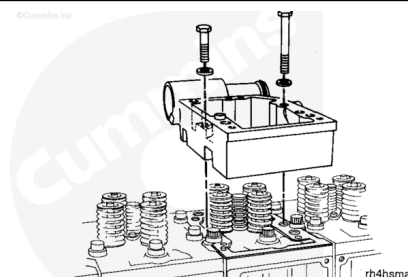


Install the number 2 and number 3 rocker lever assemblies. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/20/20-003-009-tr.html>).

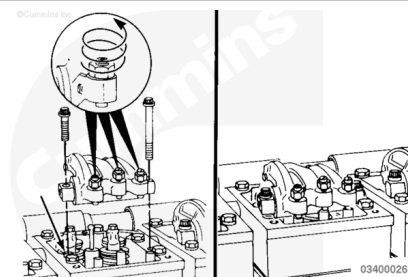


The valves and injectors **must** be correctly adjusted for the engine to operate efficiently.

Adjust the overhead settings. Refer to Procedure 003-006 (/qs3/pubsys2/xml/en/procedures/20/20-003-006-tr.html).

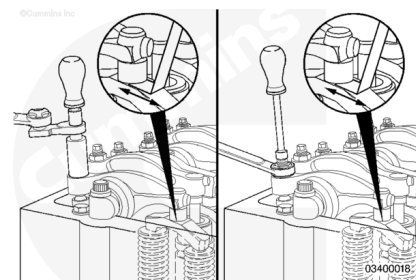


Install the number 2 and number 3 rocker lever covers. Refer to Procedure 003-011 (/qs3/pubsys2/xml/en/procedures/20/20-003-011-tr.html).

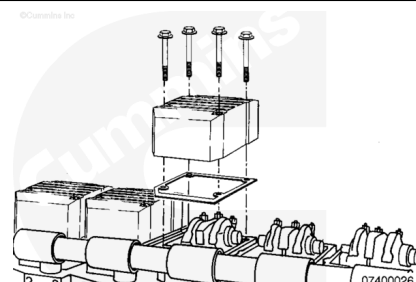

Apply an anti-seize compound on the capscrew threads.

Install the four capscrews, nuts, gasket, and exhaust transfer connection on the exhaust manifold. Tighten the nuts.


Torque Value: 45 n•m [33 ft-lb]

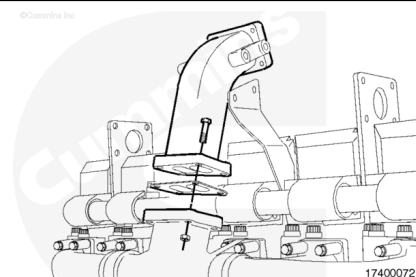

Apply an anti-seize compound on the capscrew threads.

Install four capscrews and exhaust transfer connection on the support brackets. Tighten the capscrews.

Torque Value: 135 n•m [100 ft-lb]

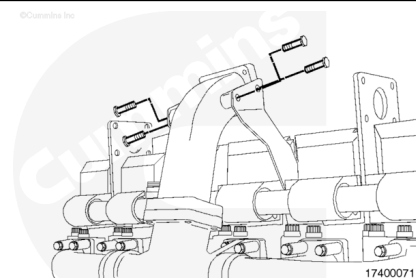

Finishing Steps

Rail Applications

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Install the turbocharger. Refer to Procedure 010-033 (/qs3/pubsys2/xml/en/procedures/20/20-010-033-tr.html).
- Fill the cooling system. Refer to Procedure .
- Operate the engine and check for leaks.



Last Modified: 21-Jul-2006
