


Trainings ▾

Install

⚠ CAUTION ⚠

Do not use gasket cement to hold the exhaust manifold gaskets in place during installation. The use of gasket cement lead to an exhaust gas leak.

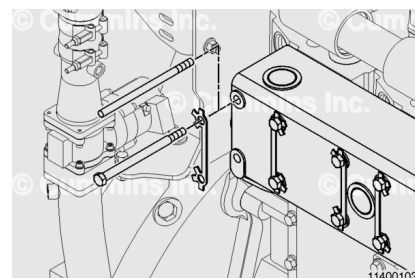


Use two 7/16-14 x 5 inch guide studs to support the manifold during installation.

Install the exhaust manifold gaskets onto the cylinder head. Use a contact adhesive to hold the gaskets in place during installation.

Install the exhaust manifold onto the guide studs.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

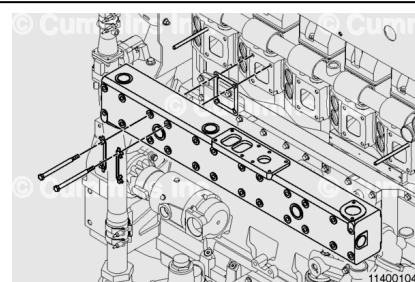

Apply anti-seize compound to the exhaust mounting capscrew threads.


Install the lockplates and capscrews.

Remove the guide studs (12) and install the remaining capscrews.

Tighten the capscrews in the sequence shown.

Torque Value: 45 n•m [33 ft-lb]

©Cummins Inc.



xm400oa

Slide the hose (10) and hose clamps (11) on the front water connection (1). Install the sealing ring (7) in the flange.

Install the front water connection, washers (3), and capscrews (2).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Connect the front water connection hose to the transfer tube between cylinder number 1 and cylinder number 2.

Tighten the hose clamps.

Torque Value: 5.6 n•m [50 in-lb]

Slide the hose (8) and hose clamps (9) on the rear water connection (4). Install the sealing ring (7) in the flange.

Install the rear water connection, washers (6), and capscrews (5).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Connect the rear water connection hose to the transfer tube between cylinder number 5 and cylinder number 6.

Tighten the hose clamps.

Torque Value: 5.6 n•m [50 in-lb]

