


Trainings ▾

Remove


Remove the water transfer connections (1) and (4) from the wet exhaust manifold.

Remove and discard the two o-rings (7), and hoses (8) and (10).

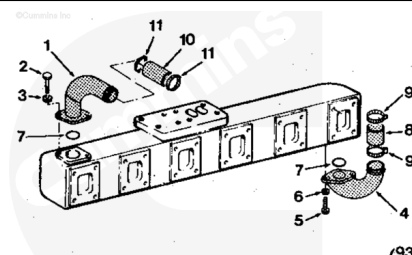

Use a drift and a hammer to bend the lockplate tabs away from the capscrew heads.


Note : Some engines do not use this type of lockplate. Some engines use a lockplate that snaps over the capscrew head and some engines use locking capscrews that do not require lockplates.

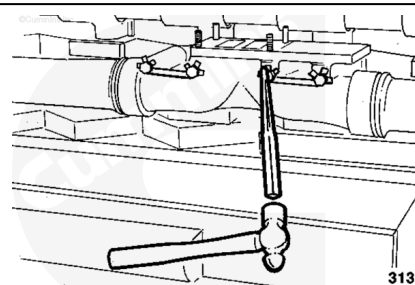

Remove the two exhaust manifold capscrews and lockplates.


Use two 7/16-14 x 15 inch guide studs to support the manifold during removal.

Install the guide studs.

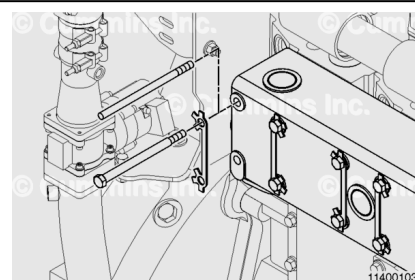

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

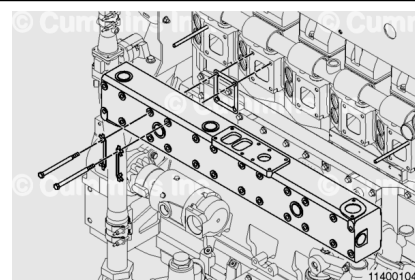

Remove the remaining capscrews and lockplates.

Remove the exhaust manifold and gaskets.

Discard the gaskets.

Last Modified: 20-Aug-2015
