


Trainings ▾

Measure

Connect a manometer or pressure gauge in the exhaust piping. The gauge **must** have a capacity of 152 mm - Hg [6 inch-Hg] or 1676 mm - H₂O [66 inch-H₂O].

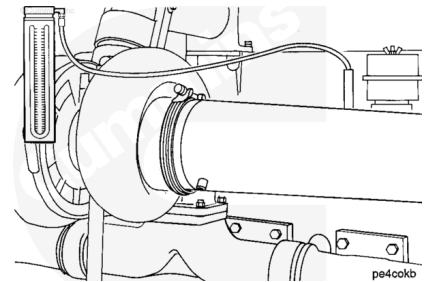


Note : The gauge adapter (or fitting) **must** be installed at a 90 degree angle to the exhaust flow in a straight section of pipe. The adapter location **must** be a minimum of 250 mm [10.0 inch] after the turbocharger.

The adapter **must not** extend through the wall of the exhaust tubing.

Note : If the adapter **must** be located in a curved section of tubing, locate it on the flat side of the curve, **not** in the radius, or the measured value **will not** be accurate.


Connect a 13 mm [1/2-inch] piece of metal tubing between the gauge adapter and the gauge hose. This will prevent damage to the hose from extreme heat.

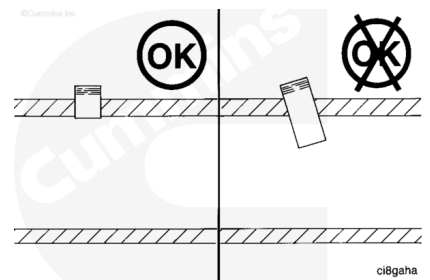

Operate the engine at rated rpm and load, and record the manometer reading.


Note : The exhaust pressure **must not** exceed 75 mm [3.0 inch-Hg].

Note : Stall speed is **not** full power.

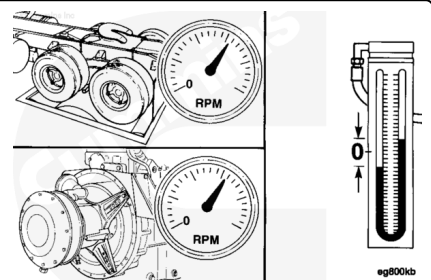

If the exhaust pressure exceeds the specification, visually inspect the exhaust piping for damage. Refer to the equipment manufacturer's instructions.

Note : If no damage is visible, check the size and routing of the exhaust piping. Refer to the Installation Recommendation Bulletin.

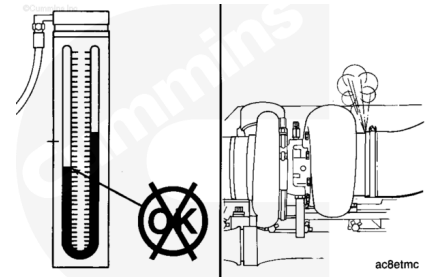

Remove the test equipment.

