


Trainings ▾

Remove

Marine Applications

Remove the seven capscrews. Remove the exhaust manifold heat shield.

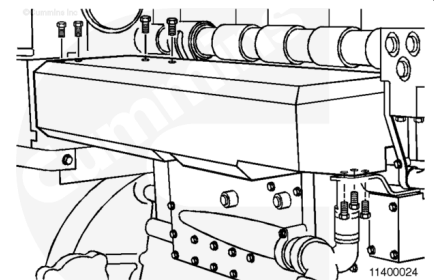


Clean

Marine Applications

⚠ WARNING ⚠

When using solvents, acids, or alkaline material for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

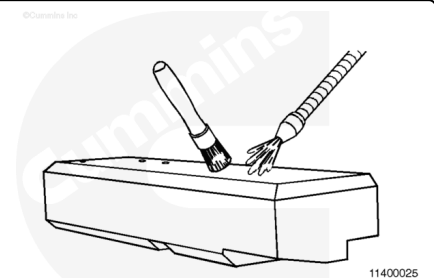


Use solvent to clean the exhaust manifold heat shield.

Inspect for Reuse

Marine Applications

Inspect the heat shield for cracks, holes, and wear around the bolt holes. Visually inspect the heat shield for cracks, and worn bolt holes. If any cracks or worn bolt holes are found the heat shield must be replaced.

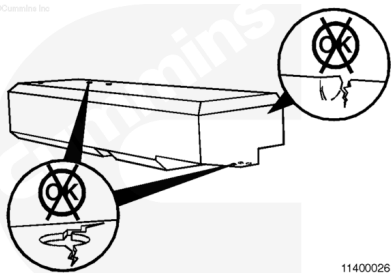

11400026

Install

Marine Applications

Note : Do not rip, tear, or damage the insulation on exhaust manifolds.

Install the exhaust manifold heat shield.

Install the exhaust manifold heat shield mounting capscrews.

Tighten the capscrews.

Torque Value: 35 n•m [25 ft-lb]

