


Trainings ▾

Install

Single Cylinder

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lbs]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

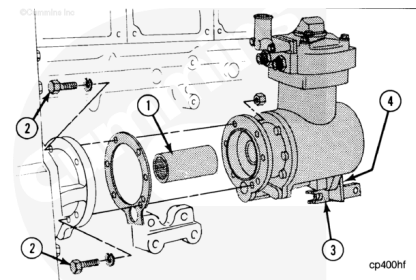


Install the splined coupling (1) on the accessory drive shaft.

Be sure the gasket surfaces of the accessory drive and air compressor are clean and **not** damaged.

Use a new gasket to install the air compressor.


Install and **only** hand-tighten the four capscrews and nuts (2).

Install the two capscrews (5) for the bracket. The support bracket **must** be flat against the block. Turn the compressor until the bracket is flat against the block.

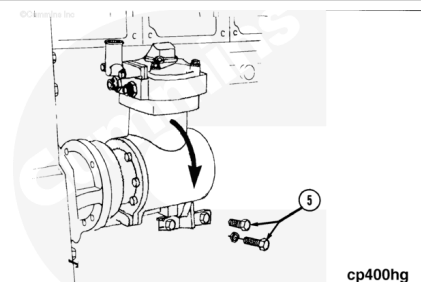

⚠ CAUTION ⚠

The bracket must be flat against the compressor. Failure to have the bracket flat can cause premature component failure.

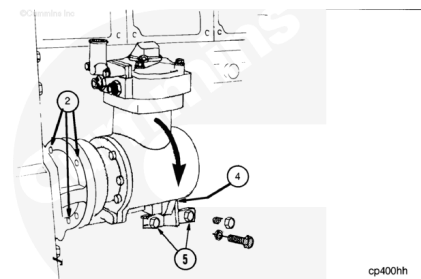

Tighten the compressor to the accessory drive capscrews (2).

Torque Value: 60 n•m [44 ft-lb]

Tighten the bracket to the block capscrews (5).

Torque Value: 45 n•m [33 ft-lb]


Tighten the bracket to the compressor capscrew (4).

Torque Value: 45 n•m [33 ft-lb]

Note : If rubber grommets are used on the coolant lines, be sure they are installed carefully to prevent cuts or tears to the grommets which cause coolant leaks. When flexible tubing is used, make sure that it **does not** rub any other surface.

Install the coolant and air lines to the air compressor and tighten.

Install the fuel pump drive coupling on the air compressor.

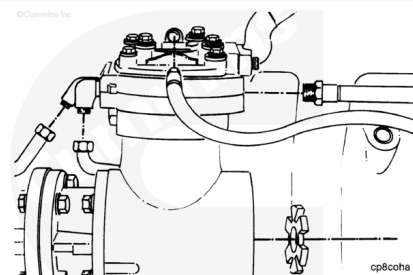


Twin Cylinder

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lbs]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

On twin cylinder compressors with a one piece bracket, install the gasket and the cover plate (support bracket) on the compressor.


Do **not** tighten the six capscrews. The support **must** be adjusted.

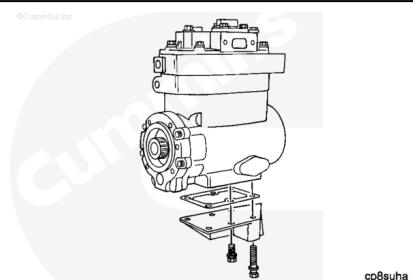

Note : Do not install the splined coupling or the mounting gasket.


Install the compressor on the accessory drive.

Install the four capscrews (6). **Only** tighten the capscrews enough to pull the compressor to the accessory drive. The compressor **must** be turned to align the support bracket.

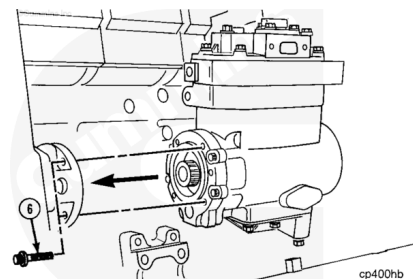

⚠ CAUTION ⚠

The support must be flat against the block. Rotate the compressor until the support is aligned properly against the block. If the support is not flat, the compressor and/or accessory drive will fail.

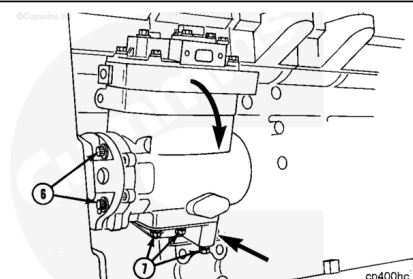

Tighten the four capscrews (6).

Torque Value: 60 n•m [44 ft-lb]


The bracket **must** remain flat against the block. Tighten the support capscrews (7) that are accessible.

Torque Value: 45 n•m [33 ft-lb]

Remove the four capscrews (6). Remove the compressor.


Tighten the two remaining supports to the compressor capscrews.

Torque Value: 45 n•m [33 ft-lb]

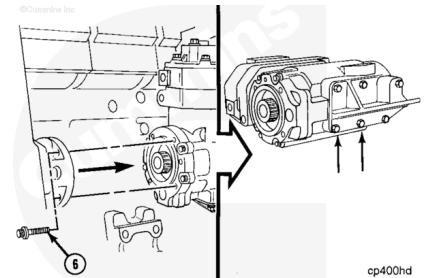

⚠ CAUTION ⚠

The support must be flat against the block. Rotate the compressor until the support is aligned properly against the block. If the support is not flat, the compressor and/or accessory drive will fail.

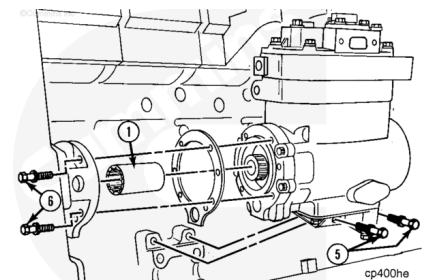

Install the splined coupling (1), gasket, and compressor.

Install the four capscrews (6) and two capscrews (5).

Torque Value:


Cap screw (6) 60 n•m [44 ft-lb]

Torque Value:

Cap screw (5) 45 n•m [33 ft-lb]


On air compressors with the two-piece bracket, install the top bracket, washers, and capscrews onto the bottom face of the air compressor.

Hand tighten the capscrews.

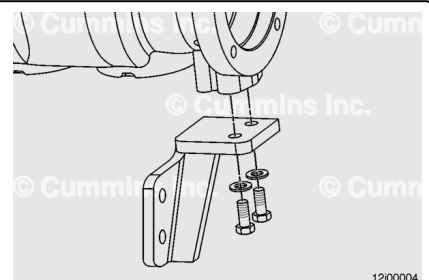


Install the splined coupling (1), gasket, and compressor.

Install the four capscrews (2), but do **not** tighten to allow movement of the compressor for support bracket installation.

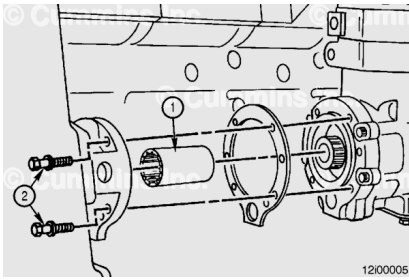

Position the bottom bracket behind the top bracket and install the capscrews, lock washers, and plain washers.

Hand-tighten the capscrews.

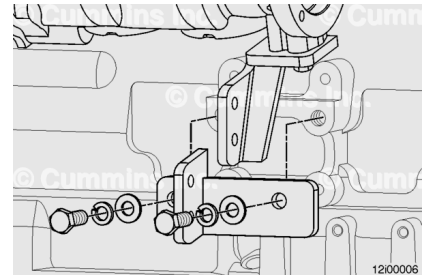


Tighten the four air compressor mounting capscrews (1).

Torque Value:

Mounting Capscrews 47 n·m [35 ft-lb]


Note : The air compressor mounting brackets have slotted holes to allow for proper alignment when the air compressor is tightened.

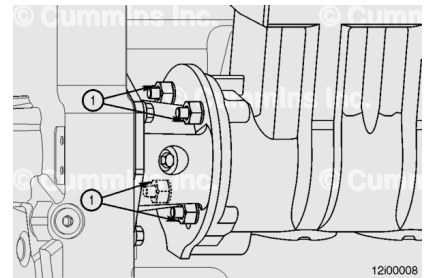

Install the two capscrews through both brackets using two plain washers, one lock washer, and one nut on each capscrew.

Hand-tighten the capscrews and nuts.

Note : Be sure the bracket mating surfaces are flush before tightening capscrews.

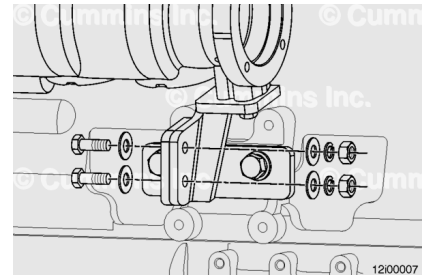

Note : Be sure brackets are flush against the compressor, block, and each other.

Tighten the capscrews to the compressor (1).

Torque Value:


Compressor Capscrews 47 n·m [35 ft-lb]

Tighten the capscrews to the block (2).

Torque Value:

Capscrews to Block 135 n·m [100 ft-lb]

Tighten the capscrews and nuts (3).

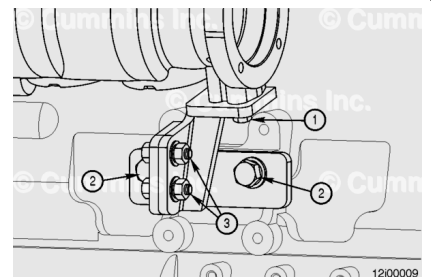


Torque Value:

Capscrews and Nuts 47 n•m [35 ft-lb]

On the one-piece and two-piece brackets, install the air inlet and outlet connections to the air compressor.

Tighten the clamps.

Torque Value: 6 n•m [53 in-lb]

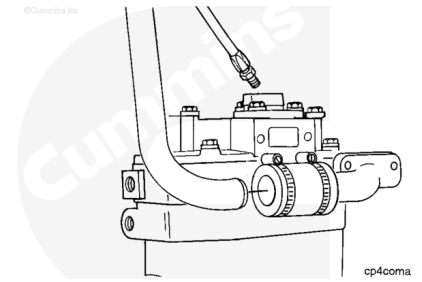

Last Modified: 11-Nov-2010
