


Trainings ▾

Remove


Single Cylinder

Remove the air inlet and outlet connections from the air compressor.

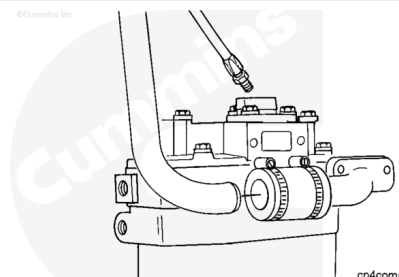

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lbs]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

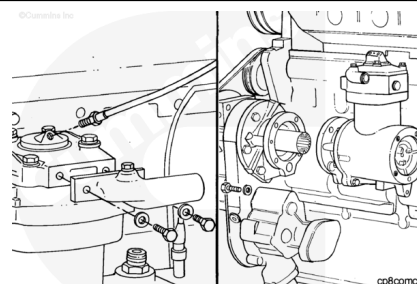

Remove the air connections from the air compressor.

Remove the air compressor support bracket and capscrews.

Remove the four capscrews, the air compressor, and splined coupling.

Twin Cylinder

Remove the air compressor support mounting capscrews (5).

Remove the four capscrews (6). Remove the air compressor.

Remove the splined coupling (1). Remove and discard the gasket.

If a two-piece bracket is used, remove the bolts and nuts securing the brackets together. Remove the bracket from the compressor and the bracket from the block.

