


Trainings ▾

Install

Lubricate the shaft with engine oil. Install the pulley and nut on the alternator shaft.

Tighten the nut.


Torque Value: 100 n·m [75 ft-lb]

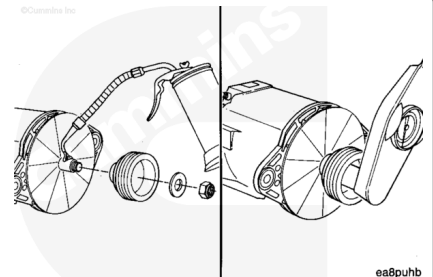

The belt **must** be adjusted before the capscrews are tightened.

Note : The end of the adjusting link with the largest area at the capscrew hole **must** be nearest to the alternator.


Install the alternator and the adjusting link as shown.

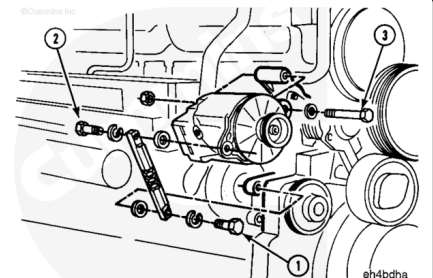

⚠ CAUTION ⚠

Do not attempt to pry the belt on the pulley to avoid damage to pulley and belt.

Install the belt. Turn the adjusting screw **counterclockwise** to shorten the link, if necessary.

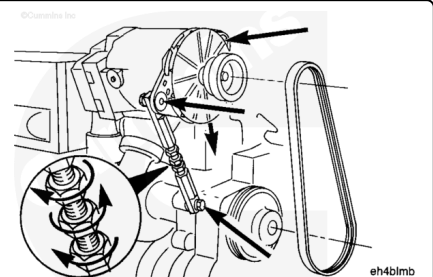


Turn the adjusting screw **clockwise** to tighten the belt.

Tighten the belt.

Measurements

	n	lbf
Belt Tension	670	150

Use the (Burroughs) belt tension gauge, Part Number ST-1138, to check the belt tension.

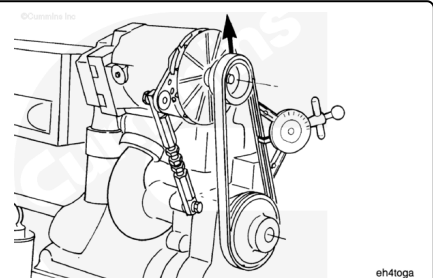

Note : The lower jam nut has **left-hand threads**.

Tighten the jam nuts on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

Torque Value:

Jam Nuts

1. 55 n•m [40 ft-lb]

Torque Value:

Alternator Mounting Capscrews

1. 55 n•m [40 ft-lb]

