

Trainings ▾


Remove

Loosen the adjusting link and the alternator mounting capscrews.

Note : The lower jam nut has left-hand threads.

Loosen both of the jam nuts. Turn the adjusting screw to relieve the belt tension.

Remove the alternator belt.

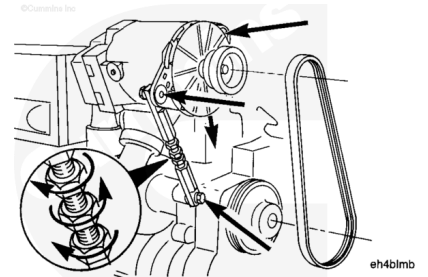

Remove capscrews (1) and (2) and the adjusting link.

Remove capscrew (3) and nut.

Remove the alternator.

