


Trainings ▾

Install

Do **not** attempt to pry the belt on the pulley. Turn the adjusting screw **counterclockwise** to shorten the link if necessary. Install the alternator belt.

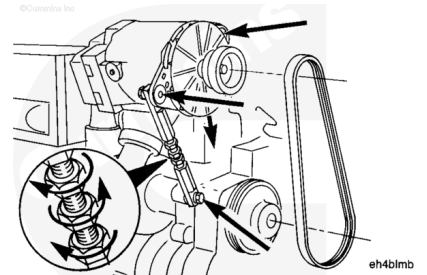


Adjust


Note : The lower jam nut has left-hand threads.

Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

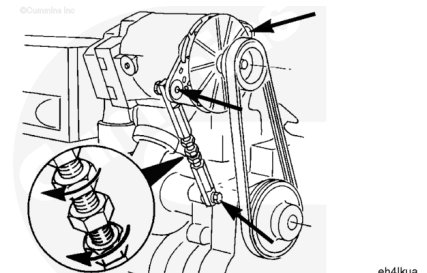


Turn the adjusting screw **clockwise** to tighten the belt tension.

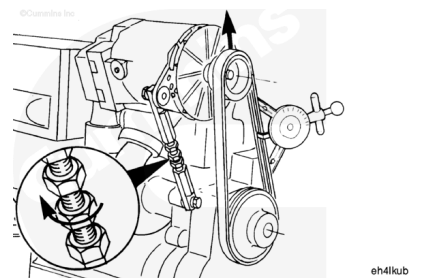

Note : The lower jam nut has left-hand threads.

Tighten the jam nuts on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

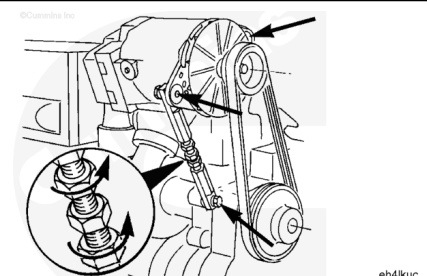

Torque Value:


Jam Nuts 55 n•m [41 ft-lb]

Torque Value:

Alternator Mounting Capscrews 55 n•m [41 ft-lb]

Check the belt tension again to be sure it is correct.

The belt tension **must** be:

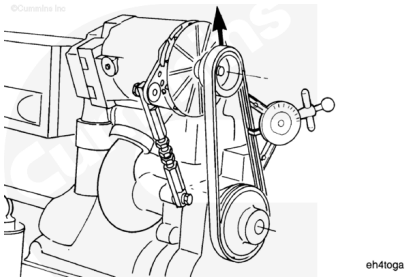

Measurements

	n	lbf
Belt Tension:	310	70

If the belt tension is **not** within specification, repeat the Adjust section of this procedure.