

Trainings ▾


Remove

Loosen the adjusting link and the alternator mounting capscrews.

Note : The lower jam nut has left-hand threads.

Loosen both of the jam nuts. Turn the adjusting screw to relieve the belt tension.

Remove the belt.

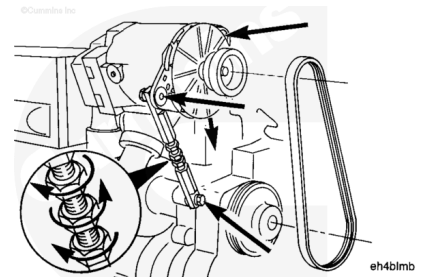


Adjust


Note : The lower jam nut has left-hand threads.

Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

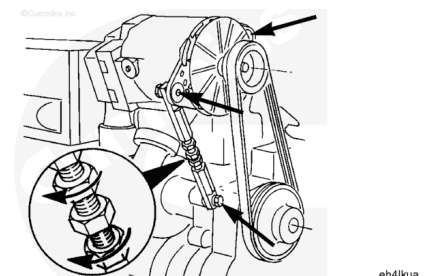

Turn the adjusting screw **clockwise** to tighten the belt tension.

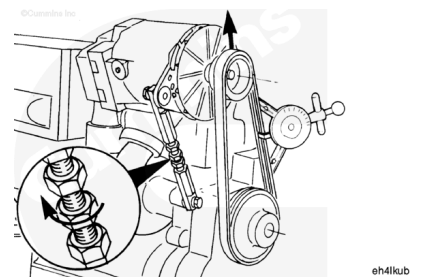

Note : The lower jam nut has left-hand threads.

Tighten the jam nuts on the adjusting screw.


Tighten the adjusting link and alternator mounting capscrews.

Torque Value:

Jam Nuts 55 n•m [41 ft-lb]

Torque Value:


Alternator Mounting Capscrews 55 n•m [41 ft-lb]

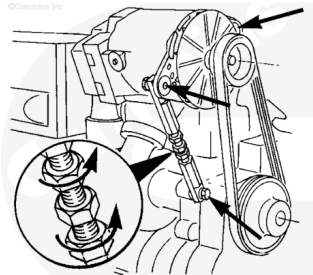

eh4lkuc

Check the belt tension again to be sure it is correct.

The belt tension **must** be:

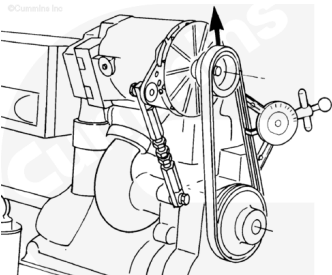

eh4toga

Measurements

	n	lbf
Belt Tension:	310	70

If the belt tension is **not** within specification, repeat the Adjust section of this procedure.