


Trainings ▾

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

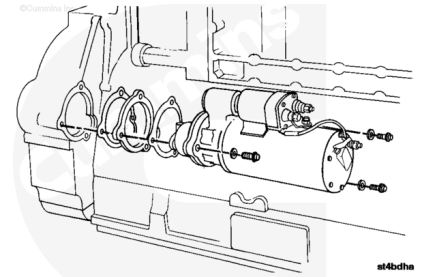

Note : Not all engines use spacers.

Note : The wet type flywheel housing requires gaskets for the starting motor.

Install any spacer or gaskets.

Install the starting motor and capscrews.

Use the following torque values to tighten the capscrews.

Torque Value:

Cast Iron Flywheel Housing

1. 215 n•m [159 ft-lb]

Torque Value:

Aluminum Flywheel Housing

1. 195 n•m [144 ft-lb]