


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift component or assembly.

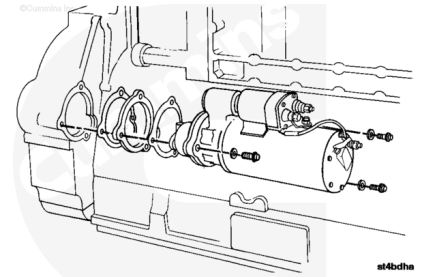

Remove the starting motor capscrews, starter, spacers, and gaskets.

Discard the gaskets.

Note : All engines do not contain spacers and gaskets.