


Trainings ▾

Preparatory Steps

General Engine Test Procedures


Note : The lubricating oil system must be primed before operating the engine after rebuild to avoid internal component damage. Do not prime the system from the bypass filter as the filter will be damaged.

Remove the large plug from the oil cooler housing.

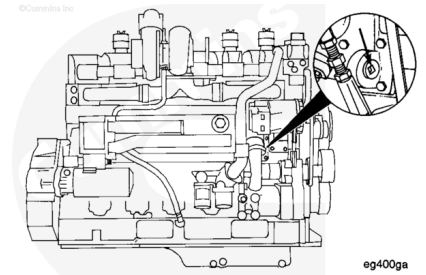


Use a pump capable of supplying 205 kPa [30 psi] continuous pressure. Connect the pump to the front of the engine oil cooler as shown.

Use a supply of clean oil. Turn the pump to the ON position. Check the engine oil pressure gauge. When the gauge indicates oil pressure, begin monitoring the oil level in the oil pan.

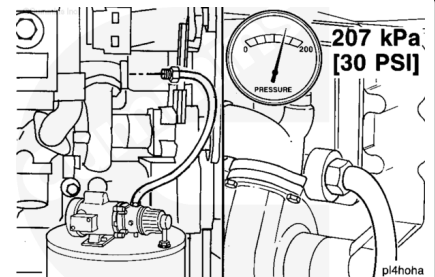


Check the engine lubricating oil level to be sure it is filled to the proper level.

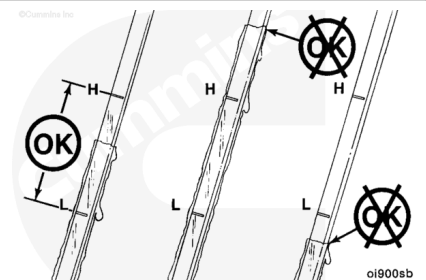

Check the engine coolant level to make sure it is filled to the proper level. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/20/20-008-018.html>).

⚠ WARNING ⚠

Check the coolant level only when the engine is stopped. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Failure to do so can cause personal injury from heated coolant spray.

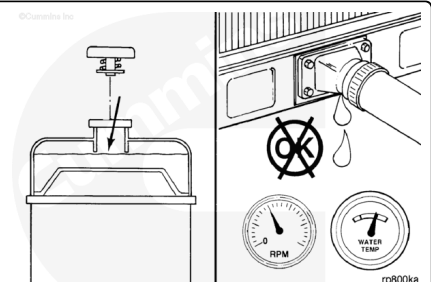


⚠ CAUTION ⚠

Do not add cold coolant to a hot engine. This can cause engine casting damage. Allow the engine to cool to below 50°C [120°F] before adding coolant.

Note : Use a known source of good quality No. 2 diesel fuel.

This is very important since No. 1 diesel fuels, along with most other alternate fuels, are lighter (lower specific gravity, higher API gravity) than No. 2 diesel fuel. The lighter the fuel, the lower the energy content (BTU) per gallon (liter, etc.).

Engine operating specifications can be found in publications available from your local Cummins Authorized Repair Location.

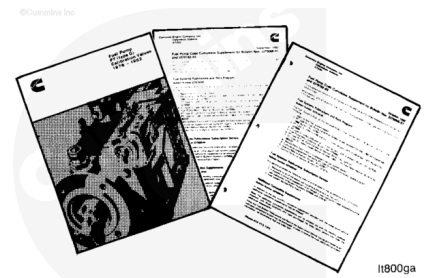


Run-In Instructions

Engines that are run on an engine dynamometer require that the engine harness be installed, and connected to the engine. Additionally, a special engine dynamometer version of the OEM wiring harness and throttle control **must** be installed.


A special wiring harness and throttle control has been developed to enable engine operation out of the chassis.

Engine Dynamometer Kit, Part No. 3162245.

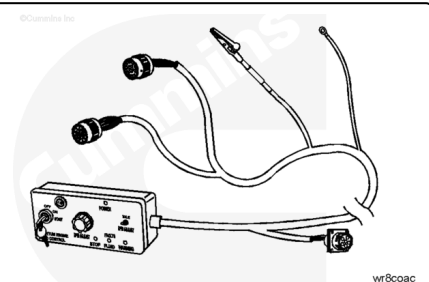


Generator Set

Operate the engine in steps, varying the load from 25 to 100 percent, until blowby remains constant.

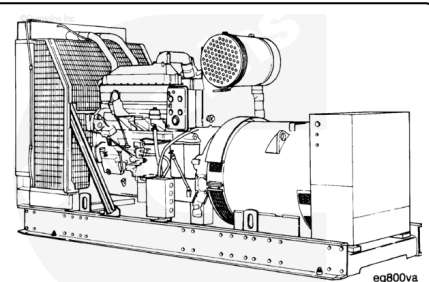


Off-Highway

Operate the equipment in the normal duty cycle at part load during the first 3 hours after rebuild.

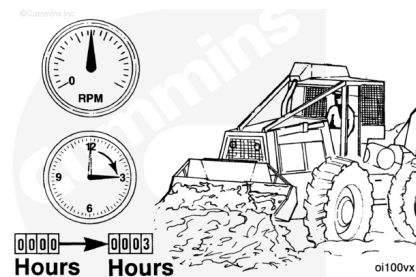

Do **not** idle the engine for more than 5 minutes at any one time.

Do **not** operate the engine at rated rpm. Operate at 75 percent of rated RPM or lower.

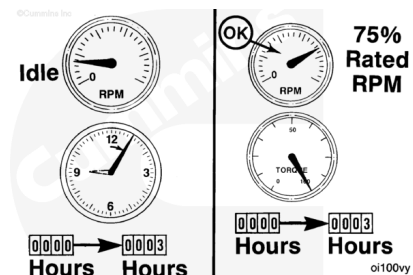

Rated RPM	Max RPM for First 3 Hours
2100	1575
2000	1500
1900	1425
1800	1350

Do **not** operate the engine at full load for more than 5 minutes at any one time.

