


Trainings ▾

Preparatory Steps

⚠ CAUTION ⚠

The lubricating oil system must be primed before operating the engine after rebuild to reduce the possibility of internal component damage. Do not prime the system from the bypass filter, as the filter will be damaged.

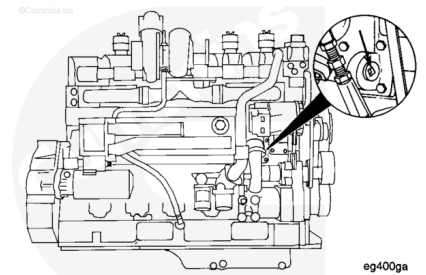


General Engine Test Procedures


Remove the large plug from the oil cooler housing.

Use a pump capable of supplying 207 kPa [30 psi] continuous pressure. Connect the pump to the front of the engine oil cooler as shown.

Use a supply of clean oil. Turn the pump to the ON position. Check the engine oil pressure gauge. When the gauge indicates oil pressure, begin monitoring the oil level in the oil pan.

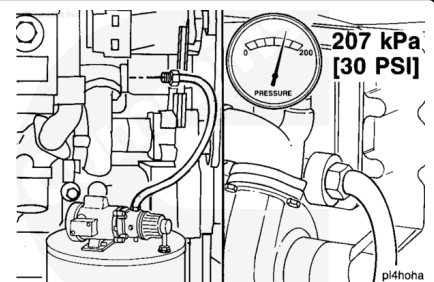


Check the engine lubricating oil level to make sure it is filled to the proper level.

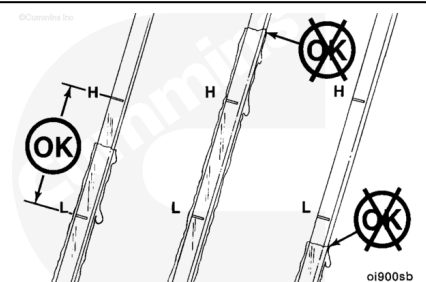

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or system steam can cause personal injury.

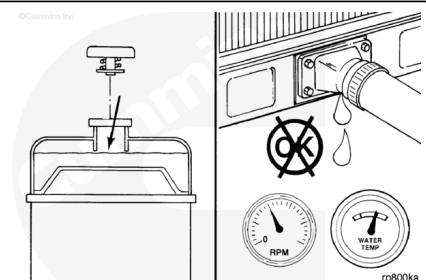

⚠ CAUTION ⚠


Do not add cold coolant to a hot engine. This can cause engine casting damage. Allow the engine to cool to below 50°C [120°F] before adding coolant.

Check the engine coolant level to make sure it is filled to the proper level. Refer to Procedure 008-018 in Section 8.
(/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html)

Use a known source of good quality Number 2 diesel fuel.

This is very important since Number 1 diesel fuels, along with most other alternate fuels, are lighter (lower specific gravity, higher API gravity) than Number 2 diesel fuel. The lighter the fuel, the lower the energy content (BTU) per gallon (liter, etc.).


Engine operating specifications can be found in publications available from a Cummins® Authorized Repair Location.

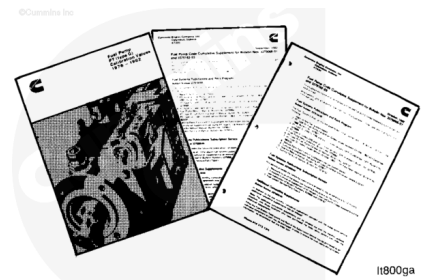

Run-In Instructions


Generator Set Applications

Operate the engine in steps, varying the load from 25 to 100 percent, until blowby remains constant.

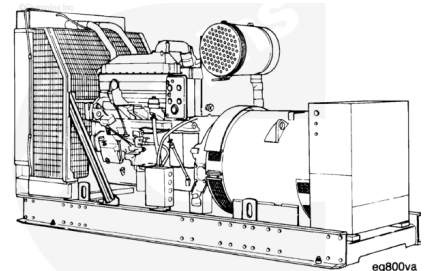


Off-Highway Applications

Operate the equipment in the normal duty cycle at part load during the first 3 hours after rebuild.

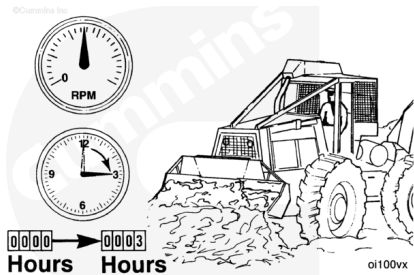

Do **not** idle the engine for more than 5 minutes at any one time.

Do **not** operate the engine at rated rpm. Operate at 75 percent of rated rpm or lower.

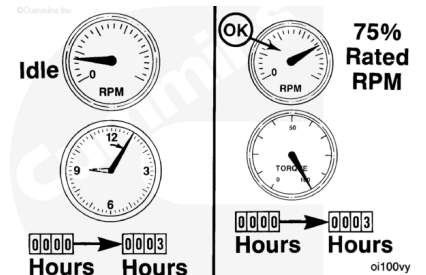

Rated RPM	Max RPM for First 3 Hours
2100	1575
2000	1500
1900	1425
1800	1350

Do **not** operate the engine at full load for more than 5 minutes at any one time.

