


Trainings ▾

Install

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

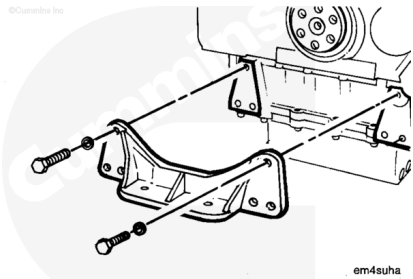

Install the support, washers, and capscrews. Tighten the capscrews.


Torque Value: 195 n•m [144 ft-lb]

Raise the engine to remove the weight from the support brackets, Part Number 3375272. Remove the support brackets.

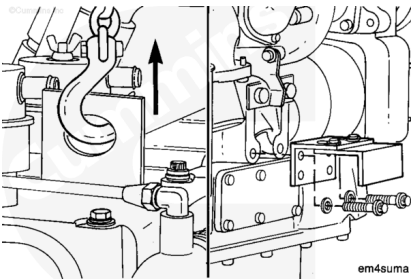

Lower the engine until the front engine support is in position. Install and tighten the capscrews.

Refer to the OEM troubleshooting and repair manual for torque values.

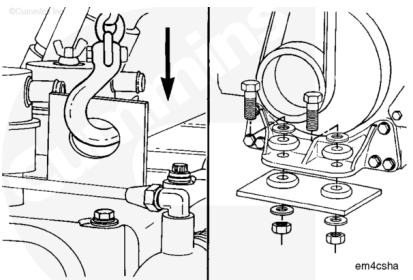

Rail Applications

Install the front engine mount and fifteen capscrews. Tighten the fifteen capscrews.

Front Mount Capscrews 3/8 [16 x 5 in]	45 n.m	[33 ft-lb]
---	--------	------------

Front Mount Capscrews 1/2 [13 x 1.75 in]	95 n.m	[70 ft-lb]
--	--------	------------

