


Trainings ▾

Remove

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

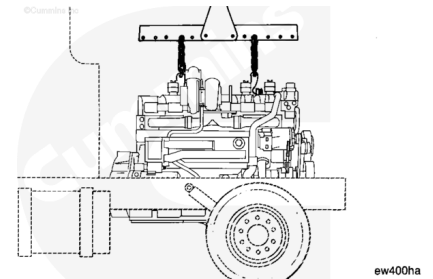


Install the engine lifting fixture, Part Number 3162871.

Remove the two capscrews that attach the support to the equipment frame.


Use a hoist to lift the weight of the engine off the front support.

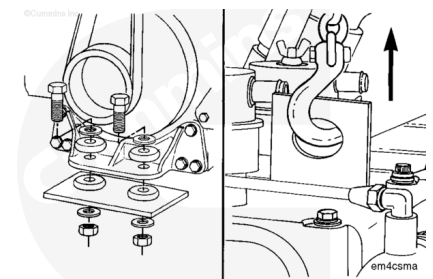


Use the engine support bracket kit, Part Number 3375272. Install one support bracket on each side of the engine.

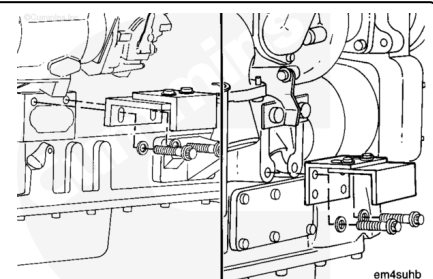

Lower the engine until the support brackets are supporting the weight.

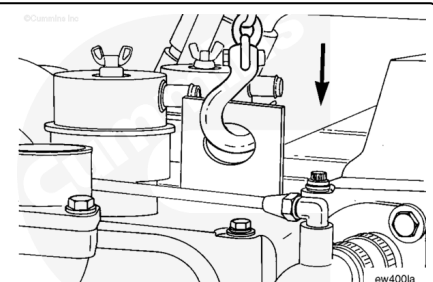

Remove the front engine support bracket.

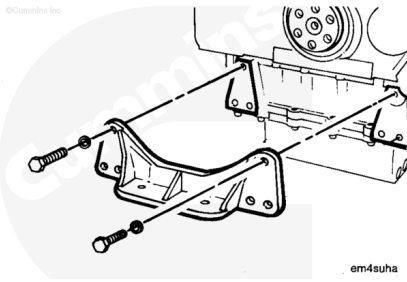

Rail Applications

Remove the front support mounting bracket by removing fifteen capscrews and washers.

