


Trainings ▾

Install

⚠ WARNING ⚠

The flywheel mounting capscrews must be a minimum of SAE Grade 8 with rolled threads. The flywheel mounting washers are special hardened plain washers. Use identical replacements to reduce possible flywheel failure resulting in personal injury or property damage.

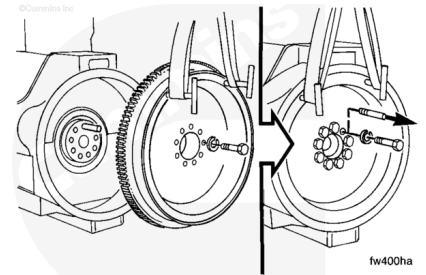

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

Lubricate the capscrews and washers with engine oil. Allow the excess oil to drip off the parts. Do **not** lubricate the threads of the crankshaft.

A guide stud will help during assembly. Install the flywheel, washers, and capscrews. The flywheel **must** be, firmly seated against the crankshaft.

Use the following steps and the torque sequence shown to install the flywheel.

Torque Value:	Step 1	150 n.m [110 ft-lb]
	Step 2	285 n.m [210 ft-lb]

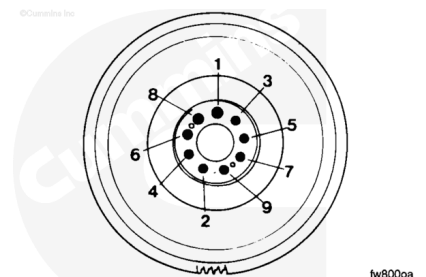

Measure the alignment of the flywheel.

Note : The crankshaft end clearance must be pushed or pulled in the same direction each time a point is measured.

Attach an indicator as shown. Measure the flywheel alignment at 4 equally spaced points.


Measure the distance from the center of the crankshaft to the indicator tip. Multiply the distance to obtain the maximum runout.

The alignment specification is 0.025 mm [0.001 inch] per 25.4 mm [1.0 inch] distance from the center of the crankshaft.

Center of Crankshaft-To-Indicator Tip:

Multiply by 0.025 mm [0.001 inch]

If the flywheel alignment is **not** within specifications, check for interference between the flywheel and the crankshaft.

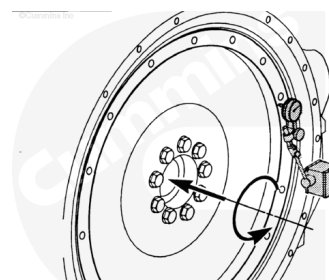

Attach an indicator as shown. Continue to look at the indicator while rotating the engine.

Measurements		
	mm	in
Maximum Radial Runout	0.13	0.005

	mm	in
Maximum Radial Runout	0.13	0.005

If the runout is **not** within specification, the pilot on the flywheel is **not** positioned correctly on the crankshaft.

If the pilot is damaged, the flywheel **must** be replaced.

