


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

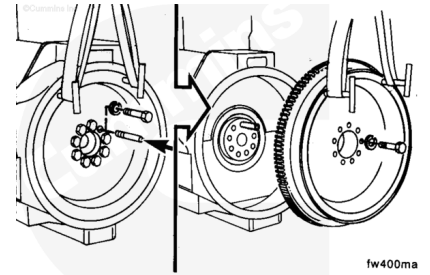

Use two [5/8-18 inch] guide studs to prevent the flywheel from rotating. Remove two capscrews and install the guide studs.

Use a hoist, two tee handles, and a lifting sling. Install the tee handles.

Remove the remaining capscrews.

Remove the flywheel.

Note : Use a mallet to tap the flywheel from the crankshaft, if necessary.