

Trainings ▾

General Information

The Mounting Adaptations group consists of the flywheel housing, flywheel, and the front engine support.

Flywheel Housing

For various applications, the flywheel housings are available in different styles, sizes, and materials. Check the appropriate parts book and the engine parts listing for the correct part number for the engine application being serviced.

Flywheel and Ring Gear

The flywheel is available **only** as an assembly. The assembly includes the flywheel and the ring gear. The ring gear is available for service.

Flywheel Housing - Redowel To The Cylinder Block

Flywheel Housing - Redowel to Cylinder Block, will describe how to install the oversize locating dowel pins in a flywheel housing and a cylinder block.


There are two dowel pins in the cylinder block. The pins protrude into holes in the flywheel housing. The pins are used to align the housing properly to the cylinder block when it is installed.

The flywheel housing **must** be in proper alignment. If the housing is **not** in proper alignment, the holes in the flywheel housing and the block **must** be reamed for a bigger dowel.


The dowel holes on QSK19 engine blocks and flywheel housings are precision doweled. The holes are machined to 12.7 mm [0.500 in] separately. The parts are assembled and the alignment is checked. If the alignment is **not** within specifications, oversize dowels are installed at the factory. Replacing the block or the flywheel housing does **not** necessarily mean that the flywheel housing and the cylinder block have to be redoweled.

Rail Applications

The rail engine front gear cover is manufactured out of cast iron and has been machined to allow the front engine mount to be installed on the cover.

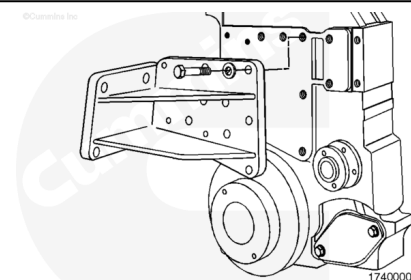

The flywheel housing has been modified to allow the engine to be mounted horizontally (intake side down). The intake side starter option is mandatory to keep a low profile design for the railcar applications.

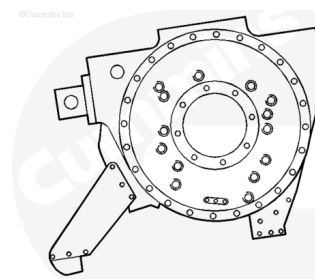


17400076

⚠ CAUTION ⚠

The flywheel housing, and the flywheel have metric threads in the capscrew holes where the OEM hardware will mount. The external mounting pads on the flywheel housing have metric threads. Using the wrong capscrews will damage the threads.

Note : A 75 degree mounting angle is available by using the front mounting support and flywheel housing. If a 78 degree angle is desired, the original equipment manufacturer (OEM) will be responsible for modifying their engine supports to achieve a 78 degree tilt.

The QSK19 Rail Engine has two rock shields to protect the intake side of the engine. The rock shields are mounted to "T" shaped brackets. The brackets are mounted to the front gear cover and lubricating oil pan adapter on the front of the engine and the flywheel housing on the rear of the engine. The rock shields extend the entire length of the engine.

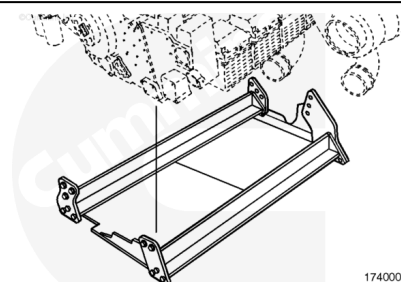

17400097

Note : The rock shields must be removed prior to working on the intake side of the engine. Make certain they are installed after work is completed.