

Trainings ▾


Install

Install a new o-ring onto the ESS.

Install the new ESS into the mounting hole in the cylinder block.

Tighten the ESS with the installation tool.

Torque Value: 20 n•m [15 ft-lb]

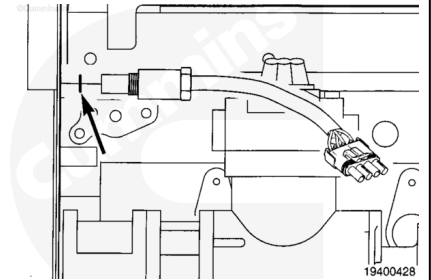

Connect the sensor to the sensor harness. Push the connectors together until they lock.

