


Trainings ▾

Install

Feed 17 wire ties through the clips of the harness support bracket.

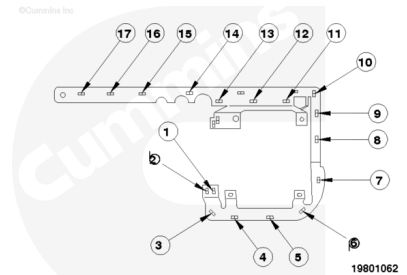


Connect the engine harness Deutsch™ connector to the ECM.
Use a 4 mm [5/32 in] hex head wrench to tighten.


Use an inch-pound torque wrench, Part Number 3376592, with 4 mm [5/32 in] hex head adapter to tighten the connector jackscrew.

Torque Value: 2.8 n·m [25 in-lb]

Note : Do not over-torque as connector damage can occur.

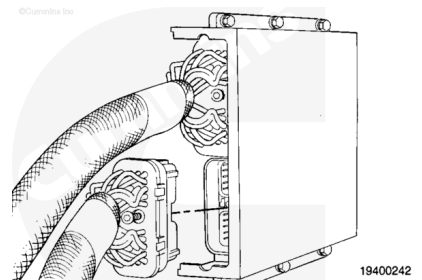


Fasten the harness to the harness support brackets using the wire ties.

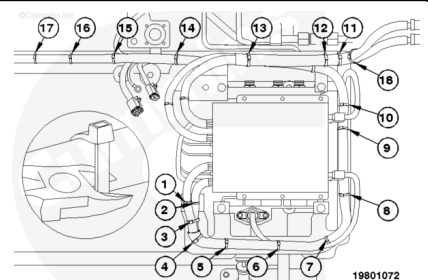


Connect the engine harness to the following:

1. Oil pressure sensor.
2. Timing actuator.
3. Rail actuator.
4. Ambient air pressure sensor.
5. Rail pressure sensor.
6. Timing pressure sensor.
7. Fuel temperature sensor.

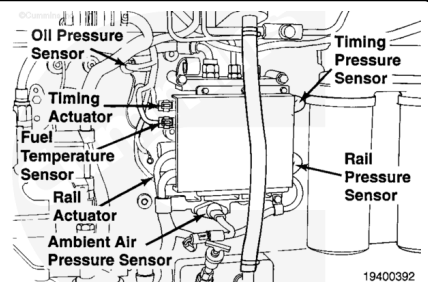


Connect the fuel shutoff control wire to the fuel shutoff solenoid. Tighten the retaining nut.

Torque Value: 2.8 n•m [25 in-lb]

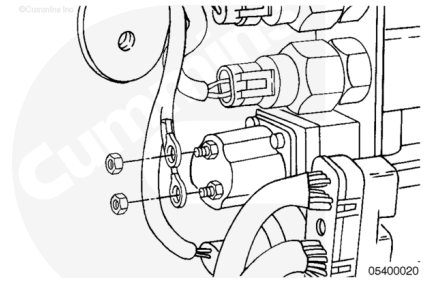


Connect the engine block ground to the engine block.

Torque Value: 20 n•m [15 ft-lb]

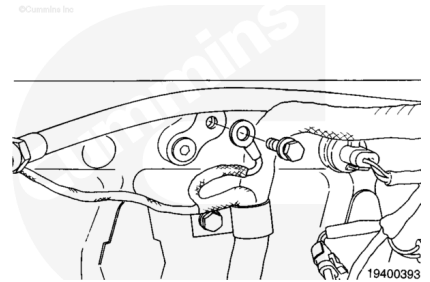


Connect the 2-pin and 6-pin Deutsch™ connectors.

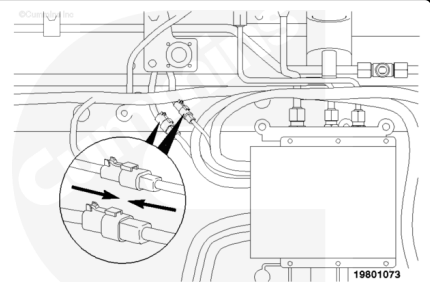

Connect the 6-pin data link connector to the harness support bracket.


Torque Value: 2.8 n•m [25 in-lb]

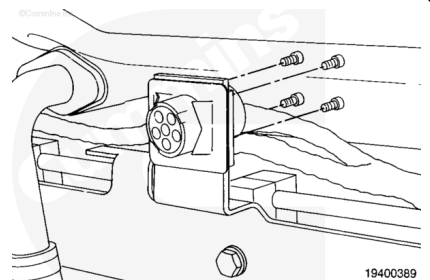


Install the data link connector support bracket.

Torque Value: 4 n•m [35 in-lb]


Fasten the harness for the intake manifold temperature sensor and intake manifold pressure sensor to the data link support bracket.

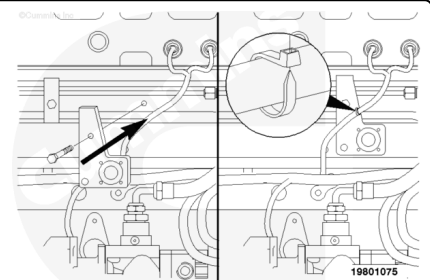


Connect the wiring harness to the intake manifold temperature sensor and intake manifold pressure sensor.

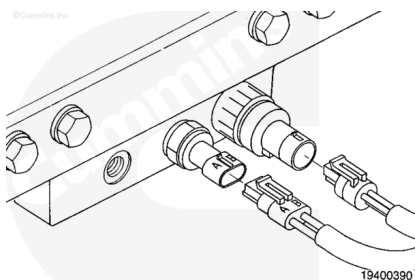


Connect the coolant temperature sensor and engine position sensor.

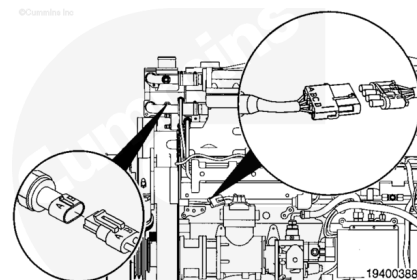

Fasten the harness to the fuel tube, aftercooler tube, and thermostat housing.

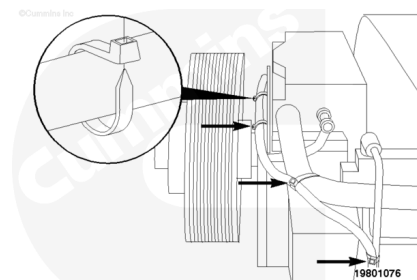

Fasten the harness to the front engine cover bracket and alternator bracket.

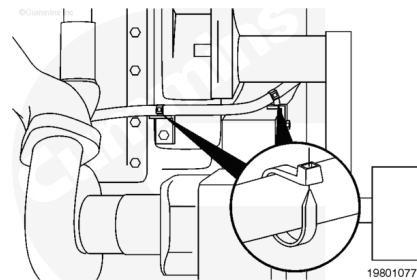

Connect the engine harness to the coolant pressure sensor. Install the engine harness clamps.

Torque Value: 20 N·m [15 ft·lb]

