


Trainings ▾


Remove

Disconnect the engine harness from the coolant pressure sensor.


Remove the engine harness clamps.

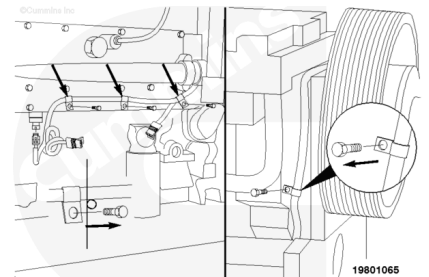


Cut the ties on the alternator bracket and front engine cover bracket.

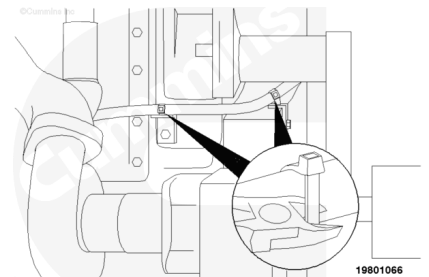


Disconnect the coolant temperature sensor and engine position sensor.

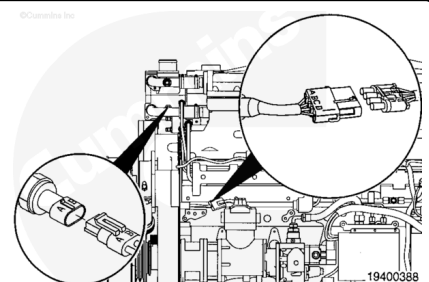

Cut the ties on the thermostat housing bracket, aftercooler tube, and fuel tube.

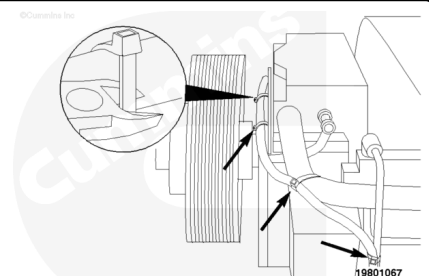


Disconnect the intake manifold temperature sensor and intake manifold pressure sensor.

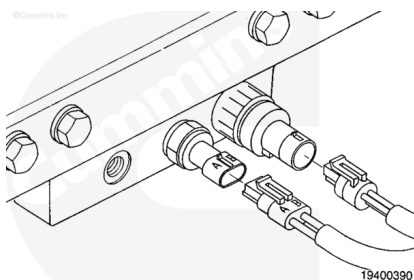


Cut the tie on the engine data link connector bracket.


Remove the bracket.

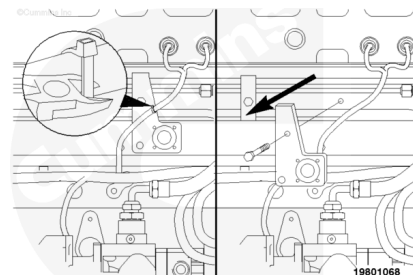

Disconnect the 6-pin data link connector from the harness support bracket by removing the four screws.

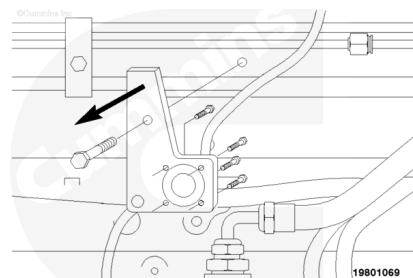


Disconnect the 2-pin and the 6-pin Deutsch™ connectors.

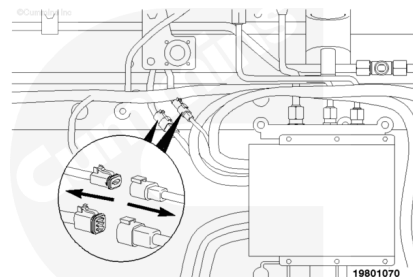


Disconnect the engine harness from the following:


1. Oil pressure sensor.
2. Timing actuator.
3. Rail actuator.
4. Ambient air pressure sensor.
5. Rail pressure sensor.
6. Timing pressures sensor.
7. Fuel temperature sensor.

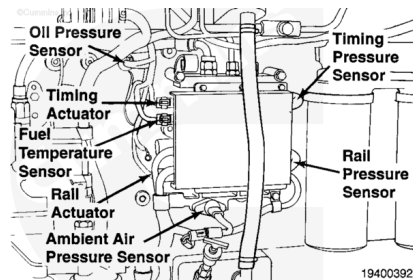


Disconnect the fuel shutoff control wire to the fuel shutoff solenoid.

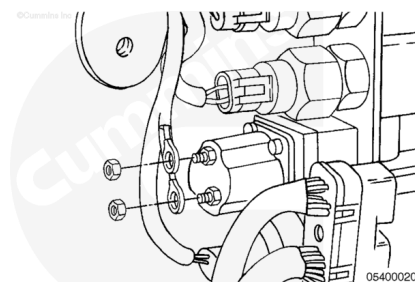


Disconnect the engine block ground from the block.

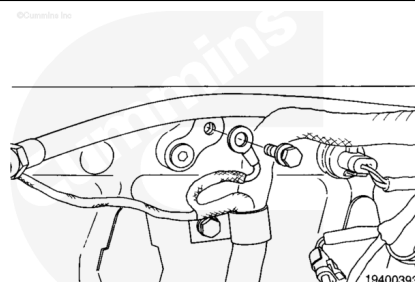

Use a 4 mm [5/32 in] hex head wrench to disconnect the engine harness Deutsch™ connector from the ECM.

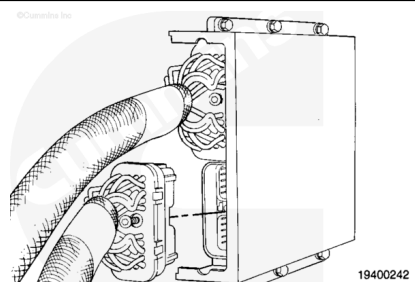

Remove the fuel supply tubes from the top of the control valve body to gain access to the engine harness. Refer to Procedure 006-024 in Section 6.
(</qs3/pubsys2/xml/en/procedures/20/20-006-024-tr.html>)

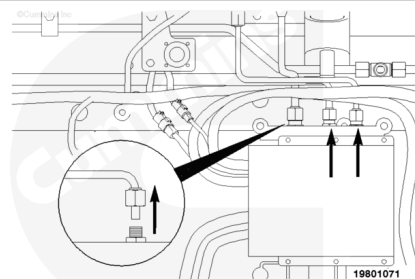

Cut the 17 ties holding the engine harness to the support bracket.

Cut the corner tie holding the engine harness to the support bracket.

Remove the engine harness.

